
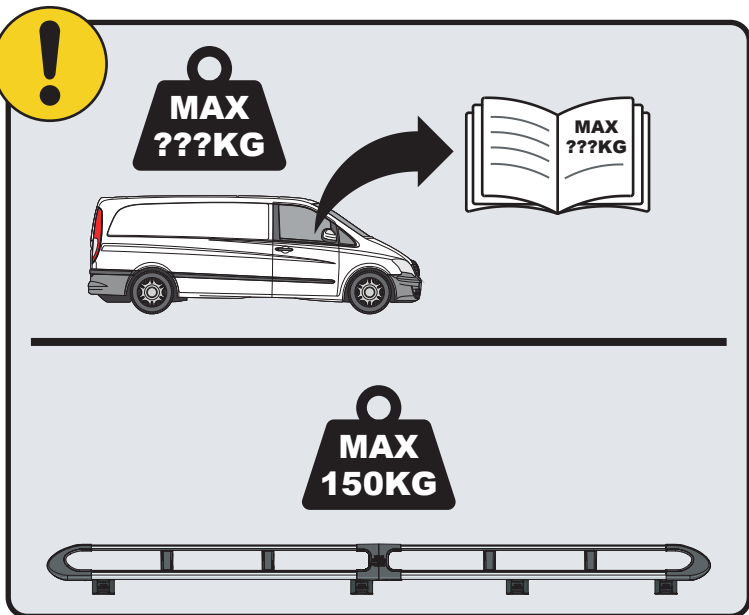


IN8303

ULTI Rack+

2

**VAN
GUARD**


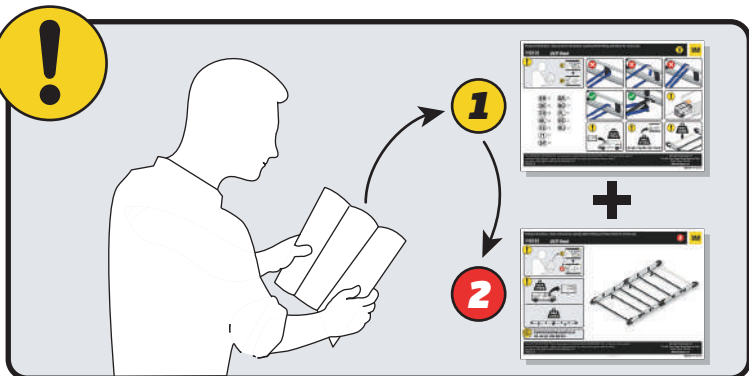


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8303_A (CN:NR)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

VGUR-232

Mercedes Vito: 2003 on
L3H1
Tailgate

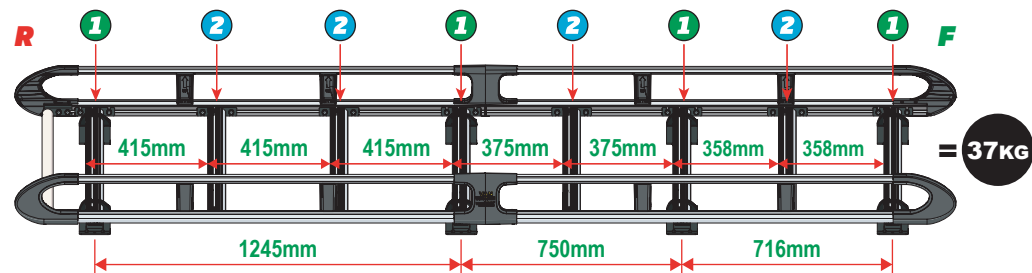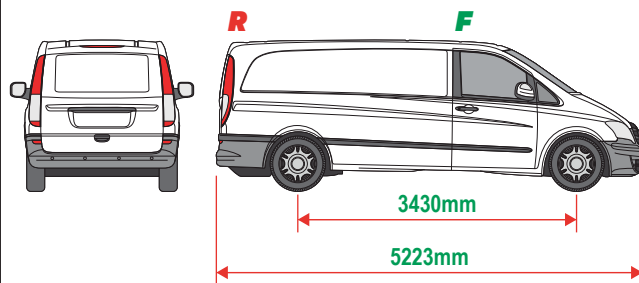



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED


10MM X2




13MM X1

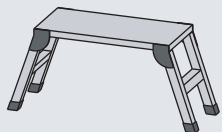

AS3541 X2
(3000 / A)

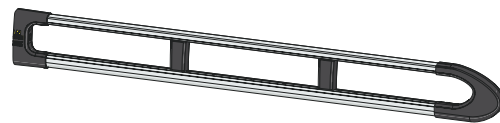


MA6118 X16




FX4241 X36



ME1622 X4




AS3540 X2
(3000 / B)




FX4008 X1




MA6145 X1




ME1623 X4



ME1627 X8
(1354mm)




FX4001 X2
(M8X40)




FX4235 X32
(M5X25)




ME0203 X8




AS3159 X1
(1340mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X8




AS3590 X1

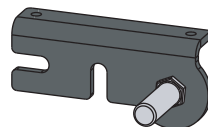


MA6093 X16



FX4239 X36
(M8X20)




ME1620 X4




FX4016 X32
(M6)



AS3591 X1




ME0316 X16




FX4240 X36
(M8)




ME1621 X4



FX4042 X16
(M6X16)




ME0729 X1

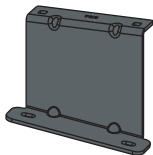

FX4013 X24

(M6)




ME0730 X1



FX4014 X24



ME0731 X4




FX4021 X16

(M6X25)




ME0732 X1

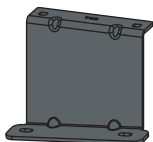

MA6019 X2



ME0733 X1

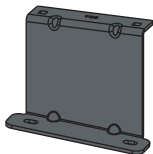


MA6020 X8




FX4012 X16

(M6X16)




01

1L



X4

1R



X4




2L




X4



2R



X4

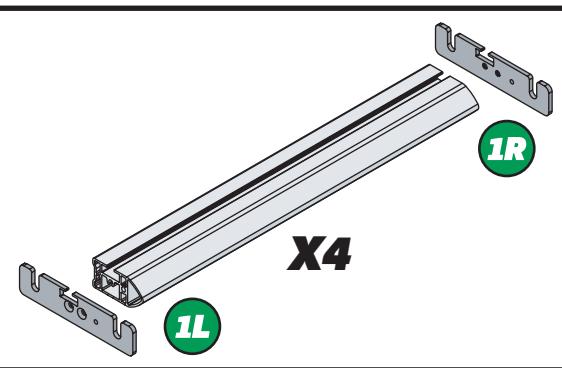

02

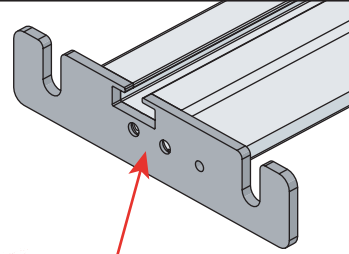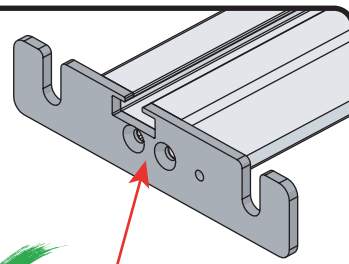


03

01


FX4248




+

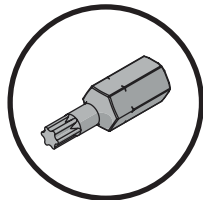


02

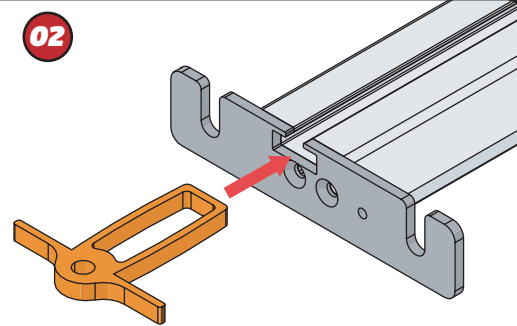


03



11Nm

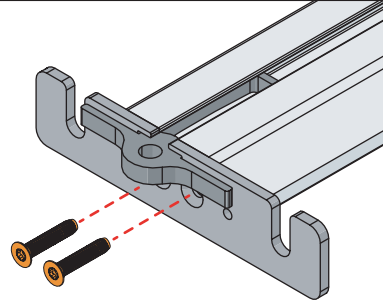


04

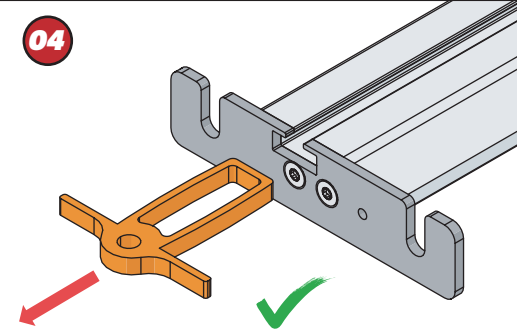




04




1

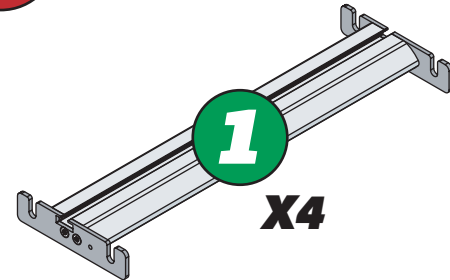


2

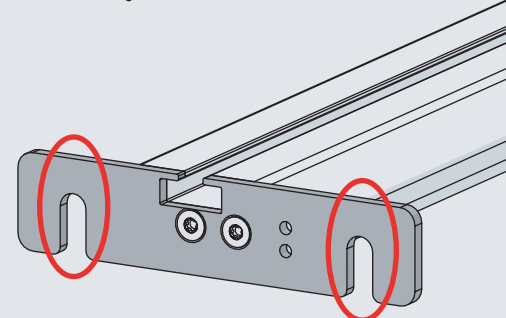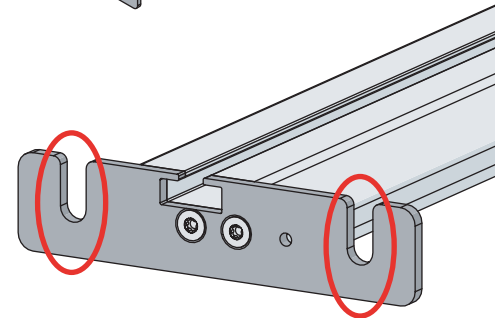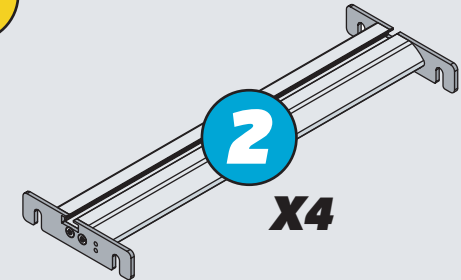


05

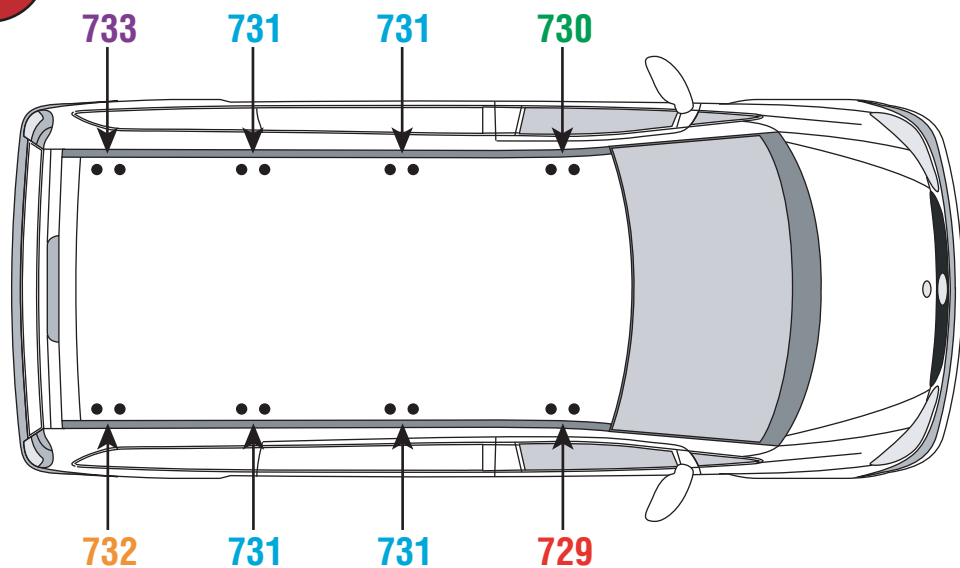


729

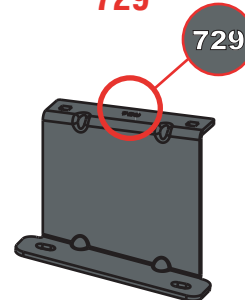


730

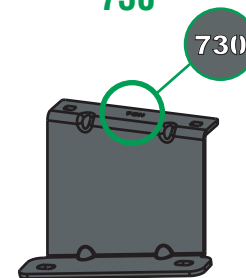


731

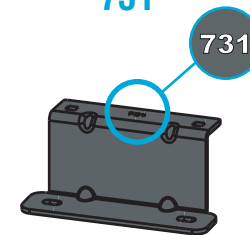


732

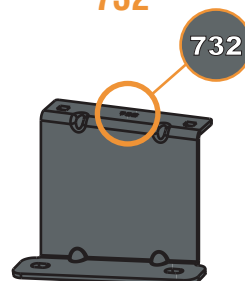

733

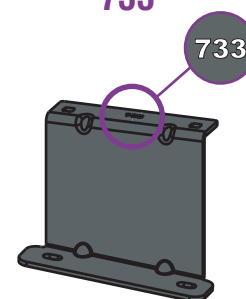




06

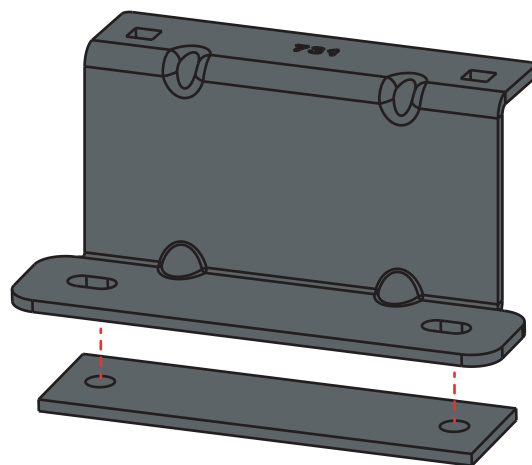


EN - STICK GASKETS TO ALL BRACKETS
 DE - KLEBEN SIE DIE DICHUNG AN ALLEN HALTERUNGEN
 FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
 NL - PLAK PAKKING OP ALLE BEUGELS
 ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
 IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE

SV - FÄST GUMMI PÅ ALLA FÄSTEN
 DA - KLÆB GUMMI PÅ ALLE BESLAG
 NO - PLIST GUMMI PÅ ALLE BRACKETTER
 PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
 CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY


07

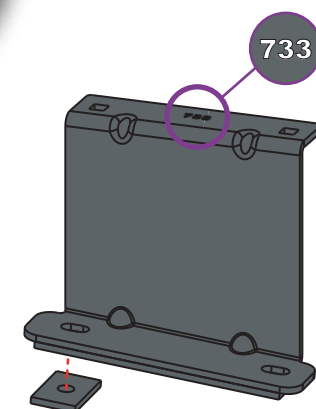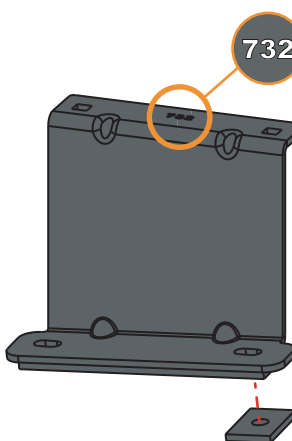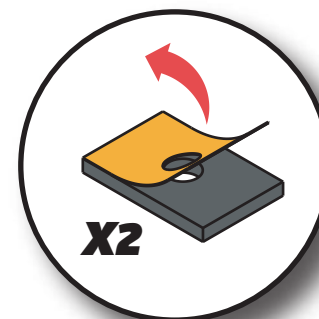


08

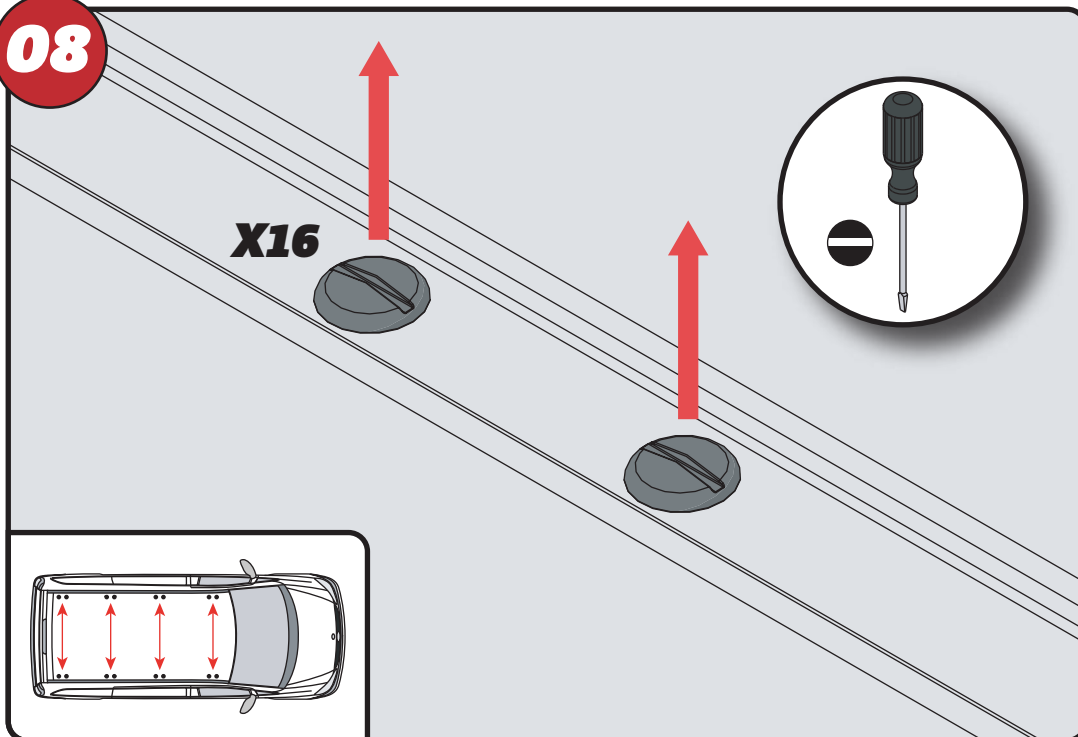


09

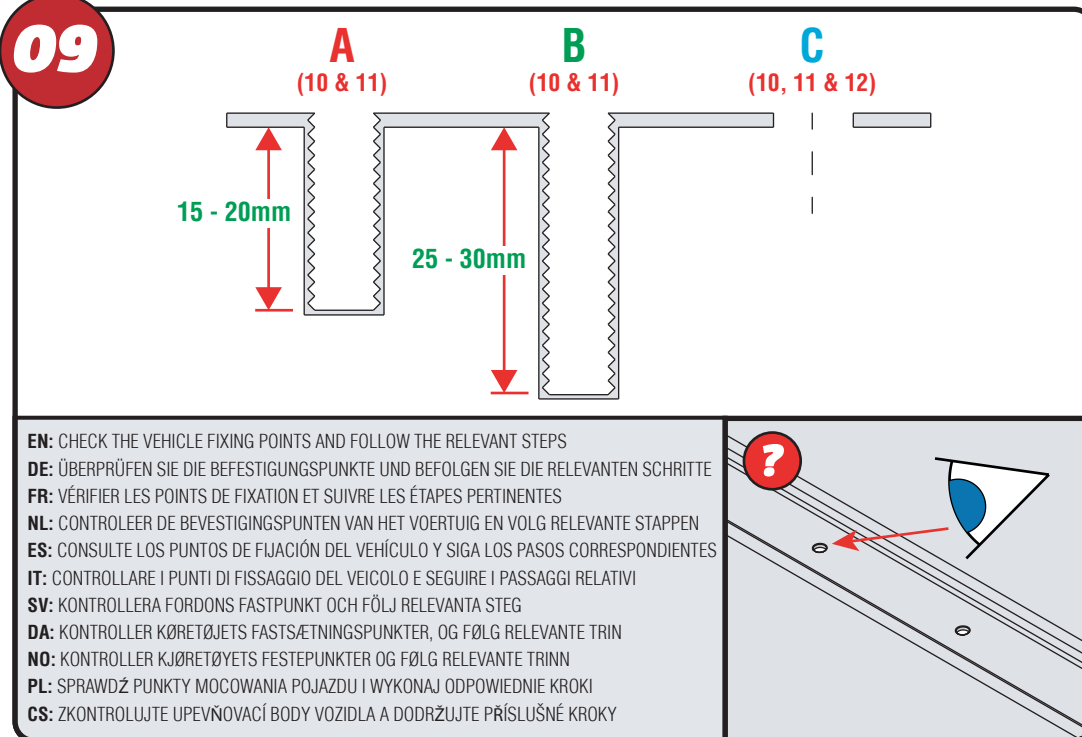

10




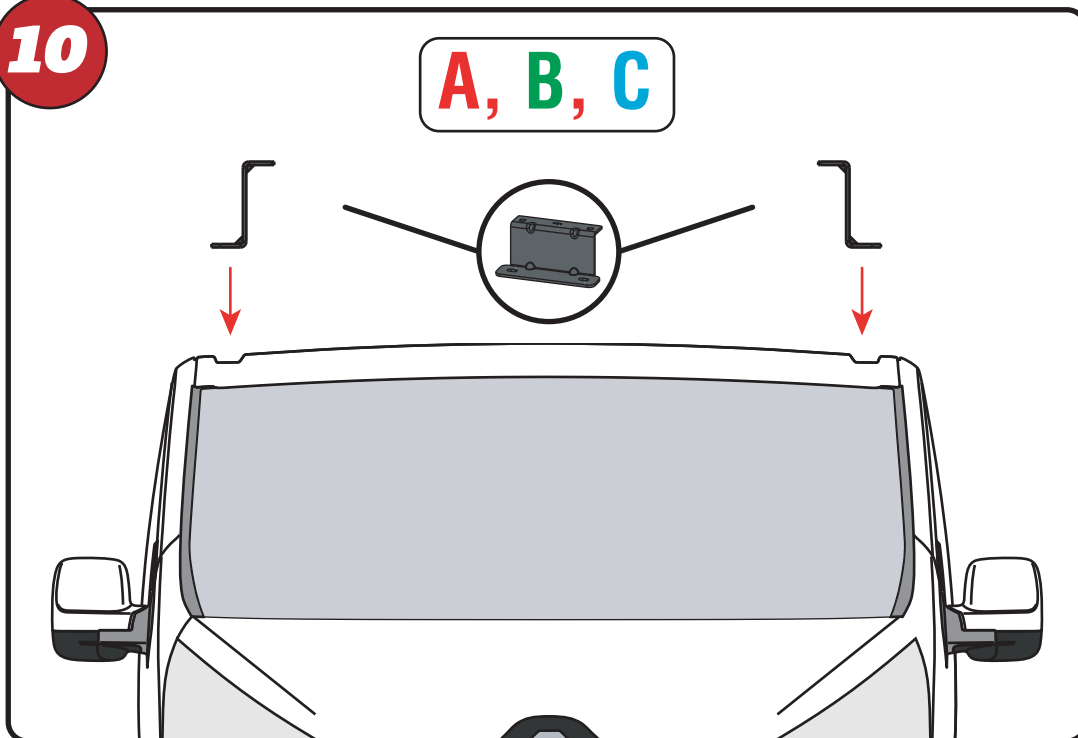


11

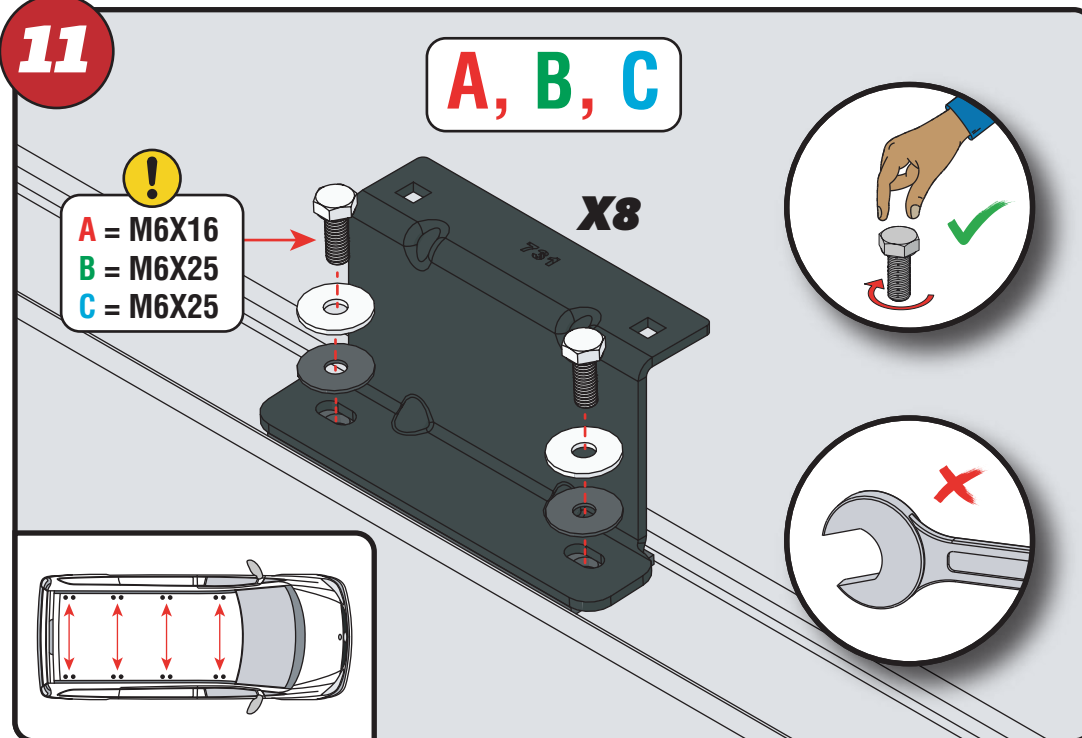


12


C

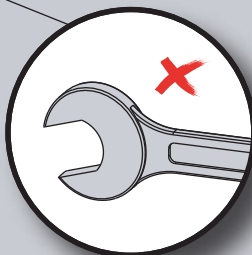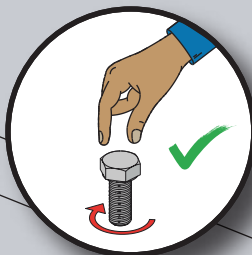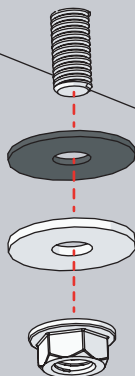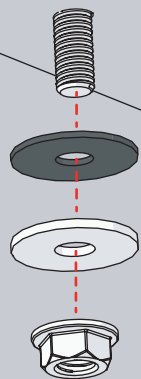


13

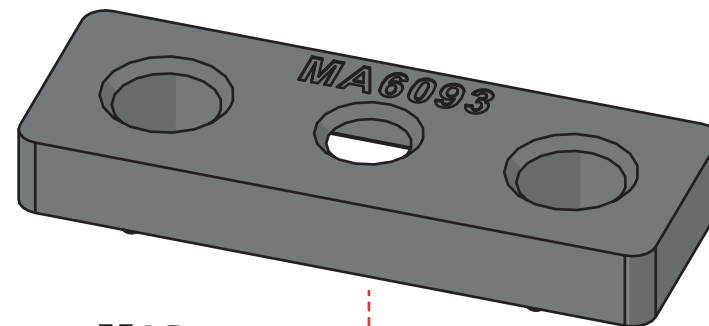

X16

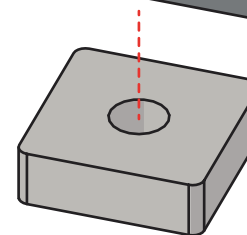

14

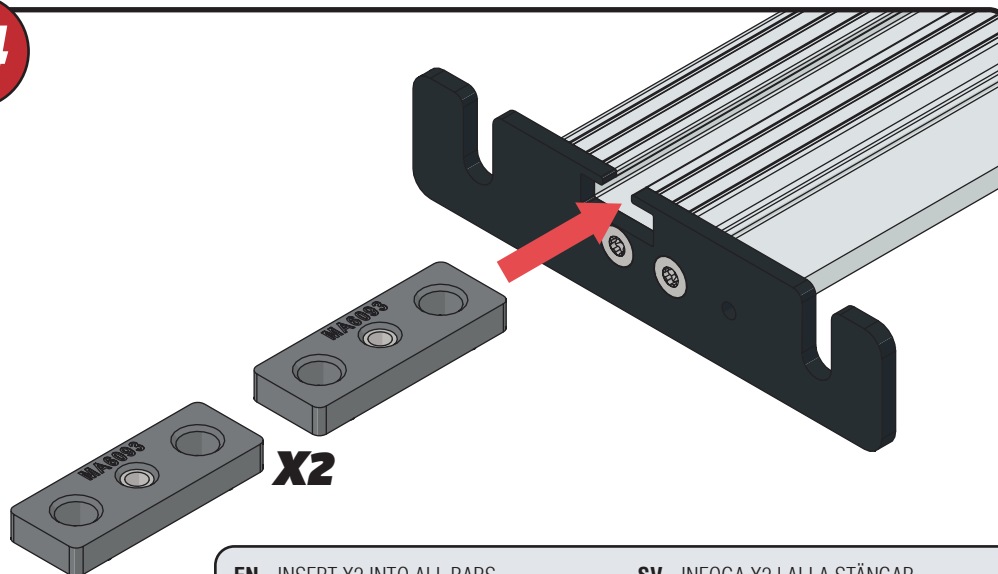

EN - INSERT X2 INTO ALL BARS

DE - X2 IN ALLE STANGEN EINFÜGEN

FR - INSÉRER X2 DANS TOUTES LES BARRES

NL - PLAATS X2 IN ALLE BARS

ES - INSERTAR X2 EN TODAS LAS BARRAS

IT - INSERIRE X2 IN TUTTE LE BARRE

SV - INFOGA X2 I ALLA STÄNGAR

DA - INDSÆT X2 I ALLE STÆNGER



NO - SETT X2 INN I ALLE TAKSTENGER

PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW


CS - VLOŽTE X2 DO VŠECH TYČÍ

RU - ВСТАВЬТЕ X2 ВО ВСЕ ПРУТКИ


15

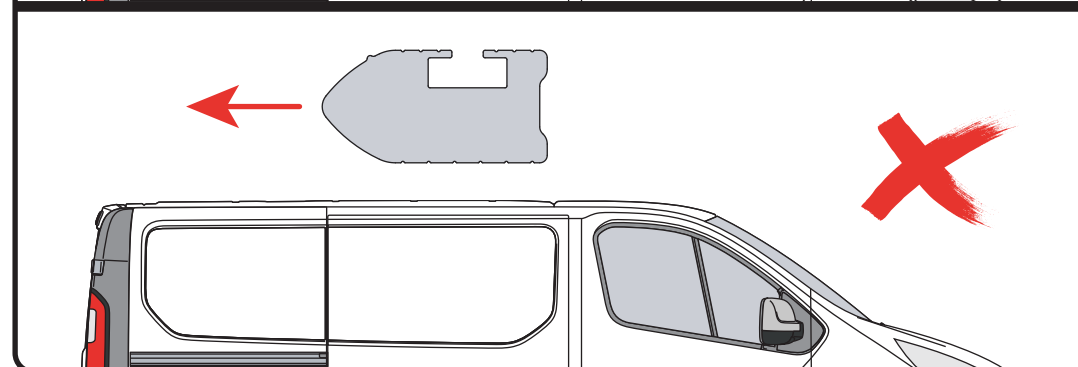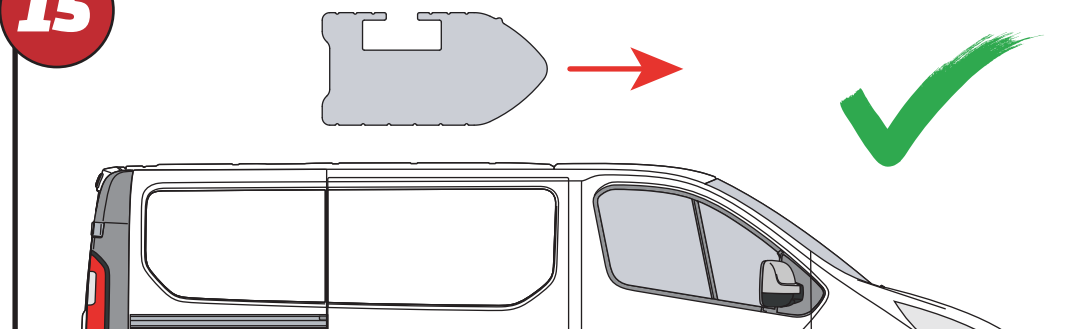


16

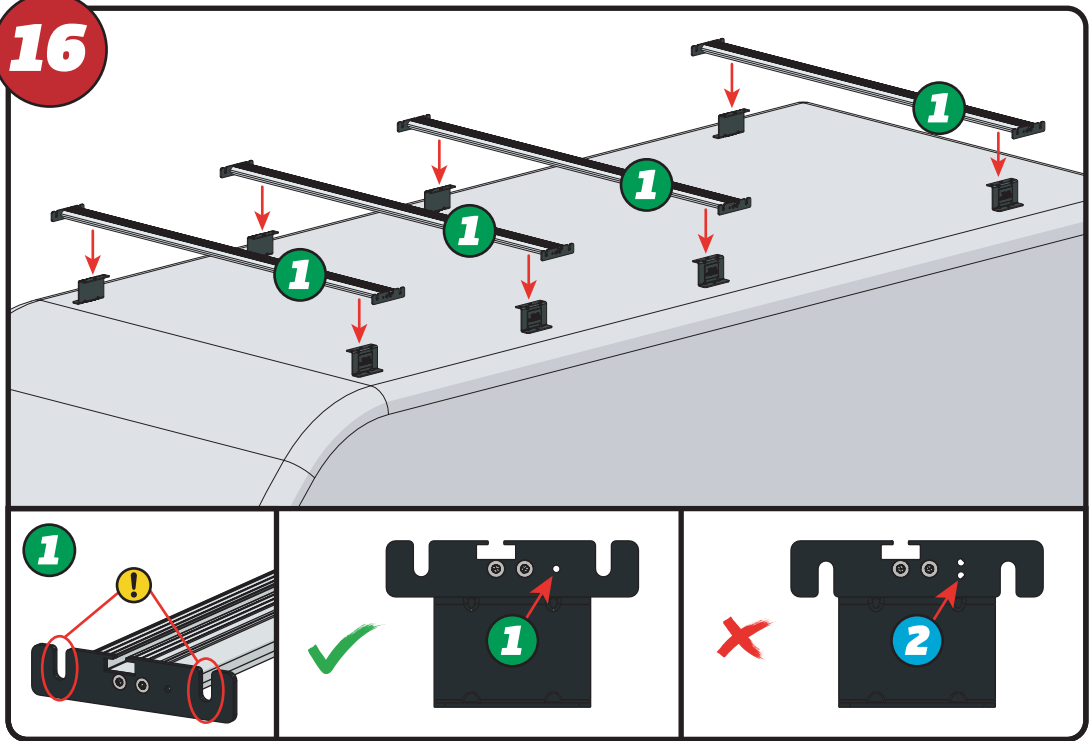


17

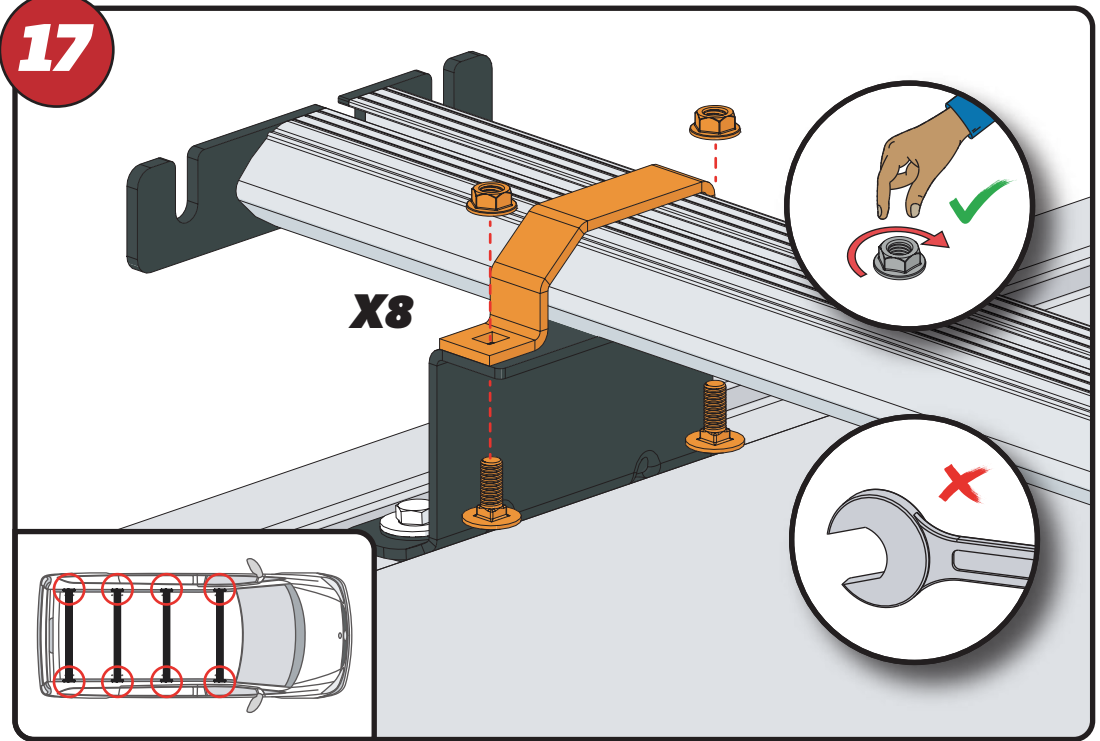




18

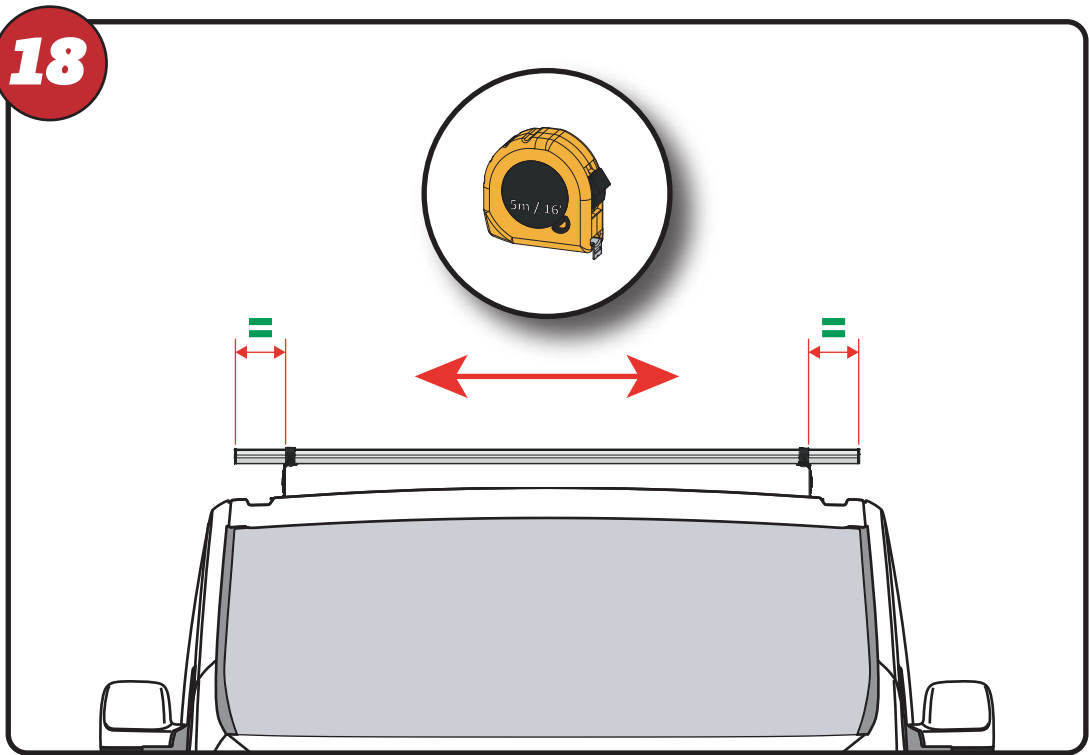


19

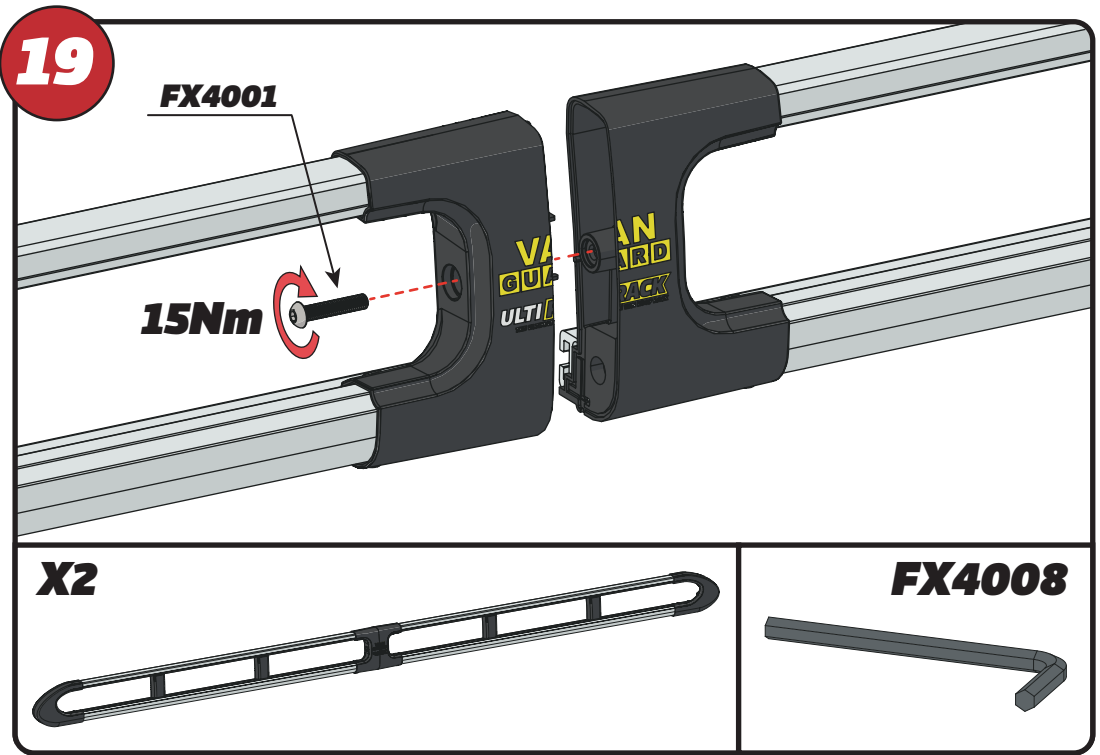


20

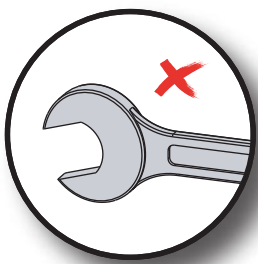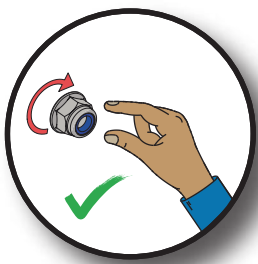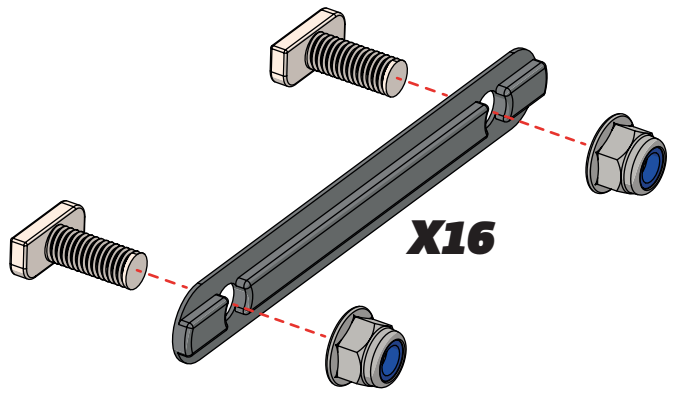


21

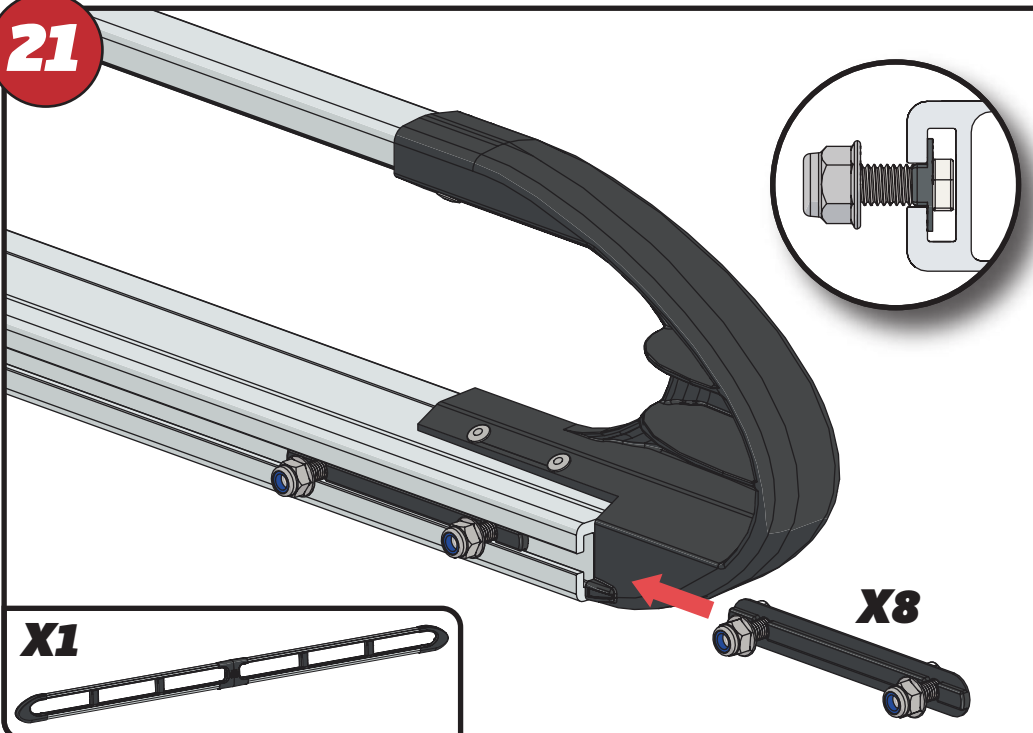


22

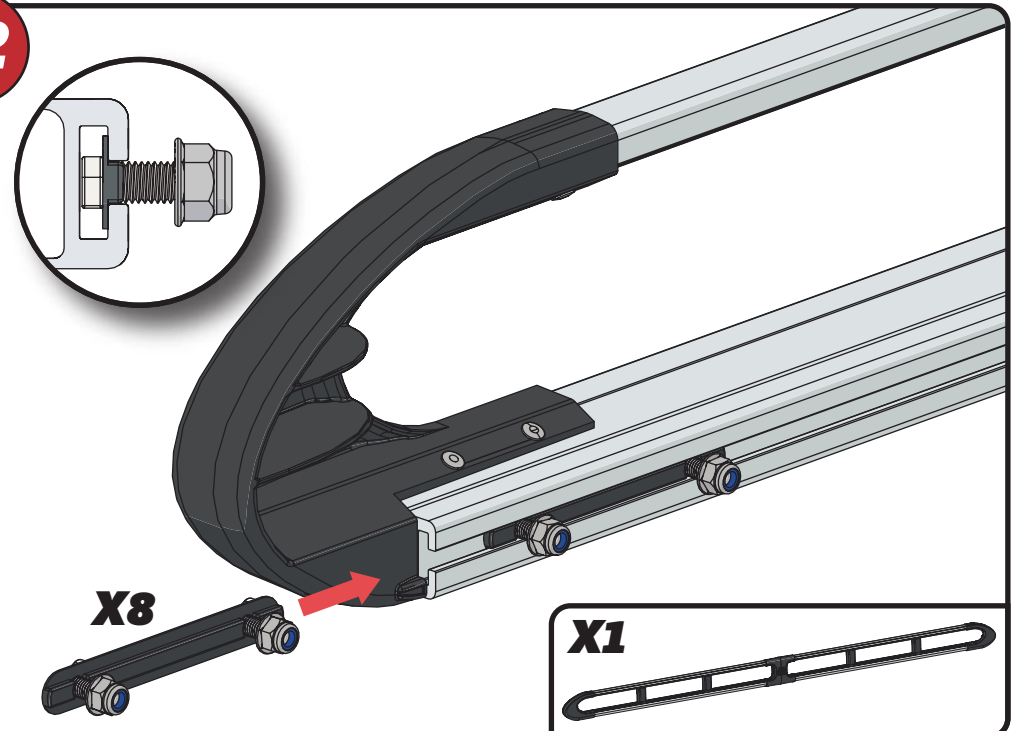


23

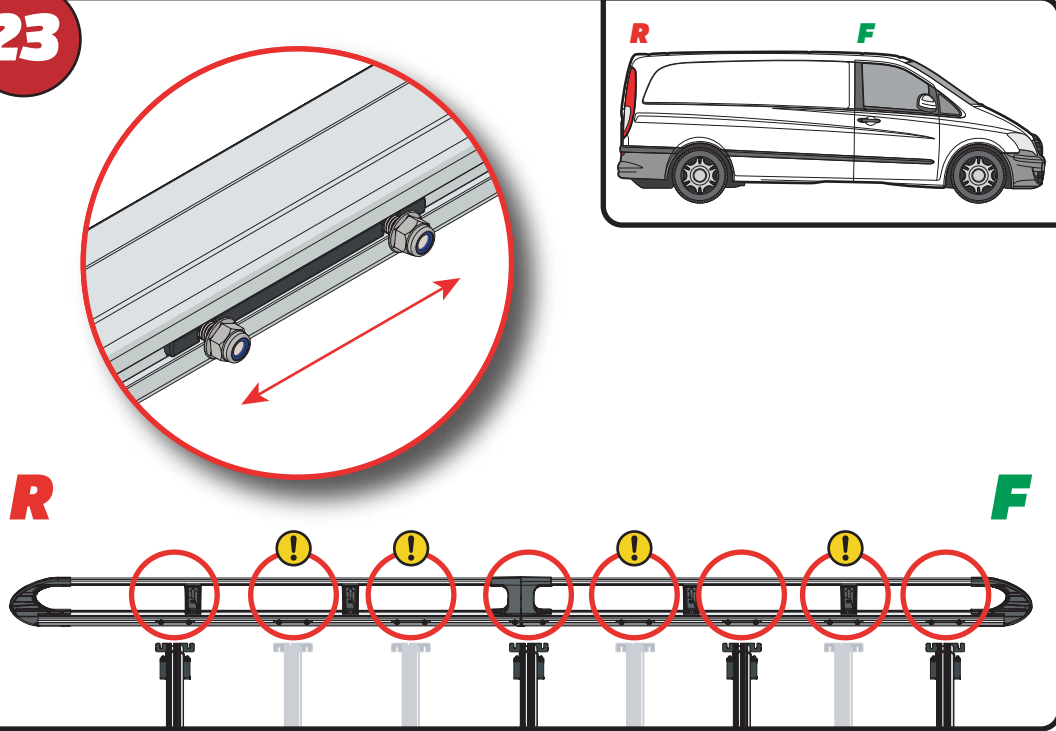


24

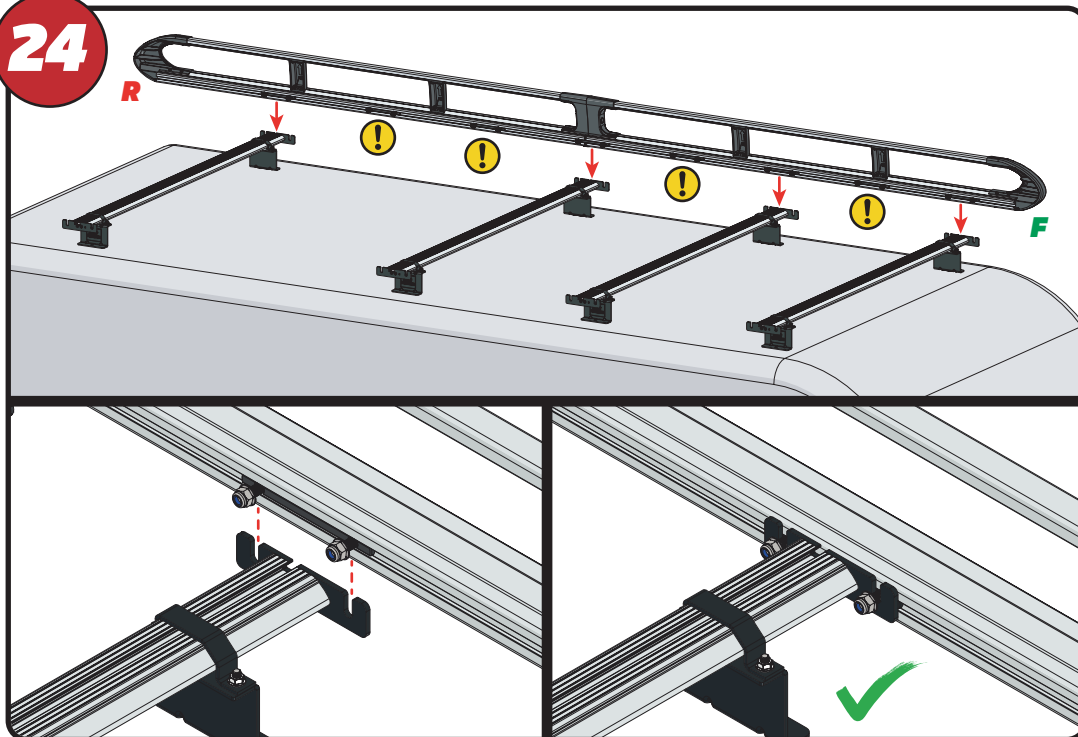


25

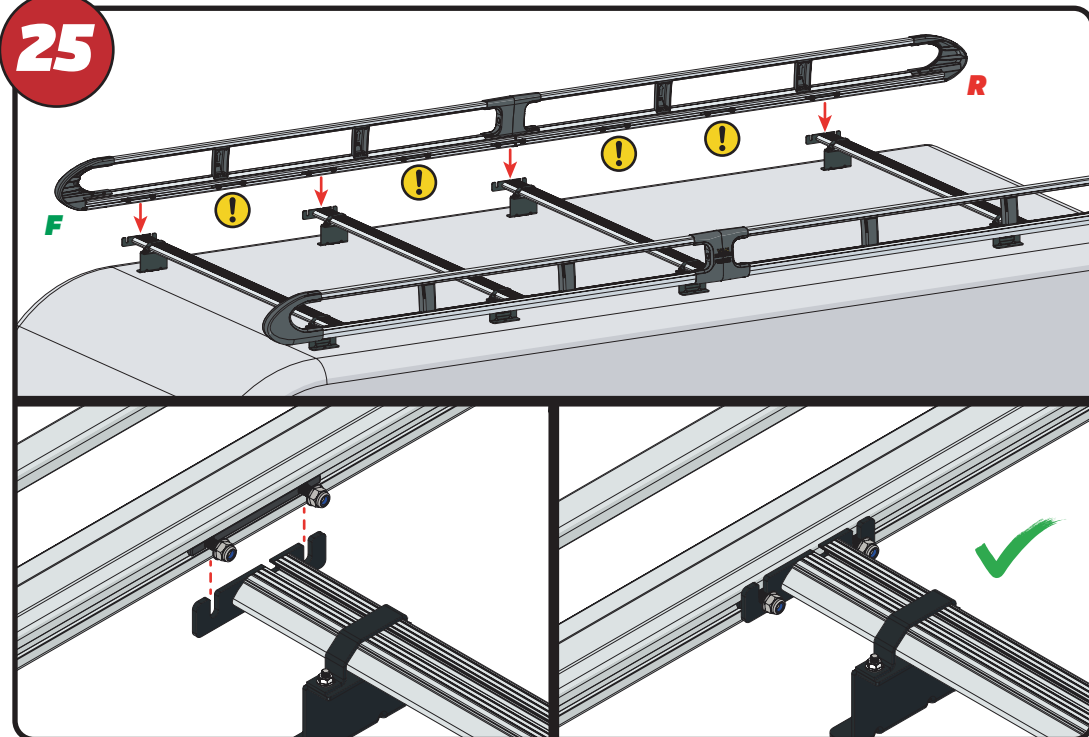


26

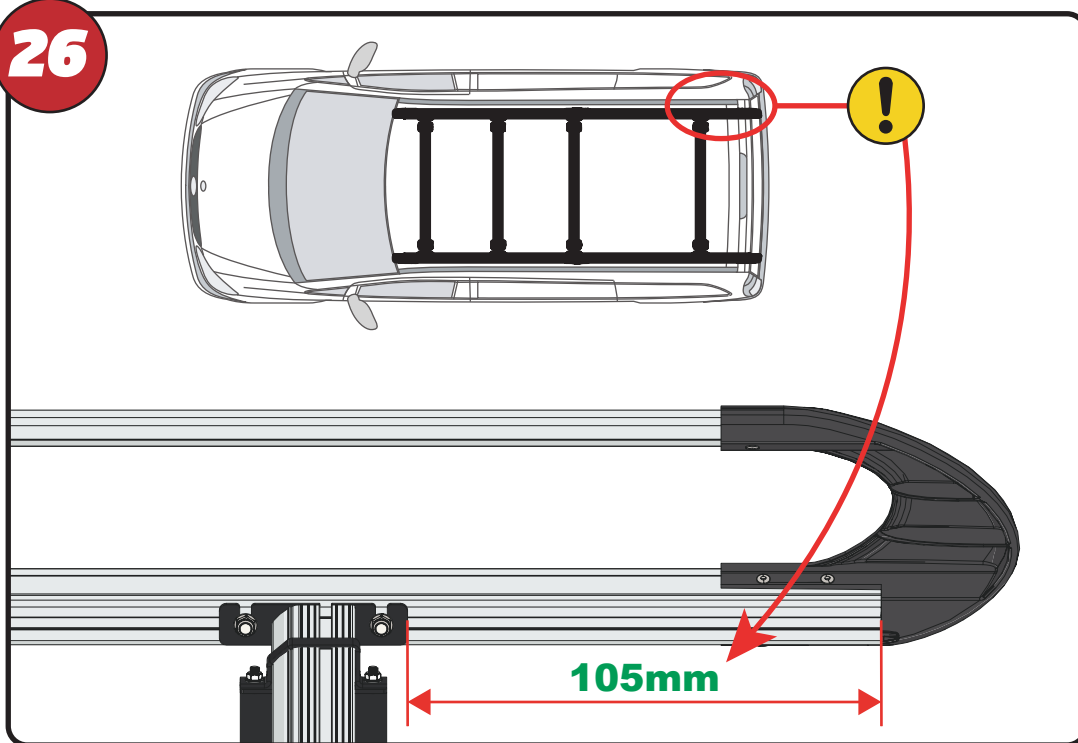


27

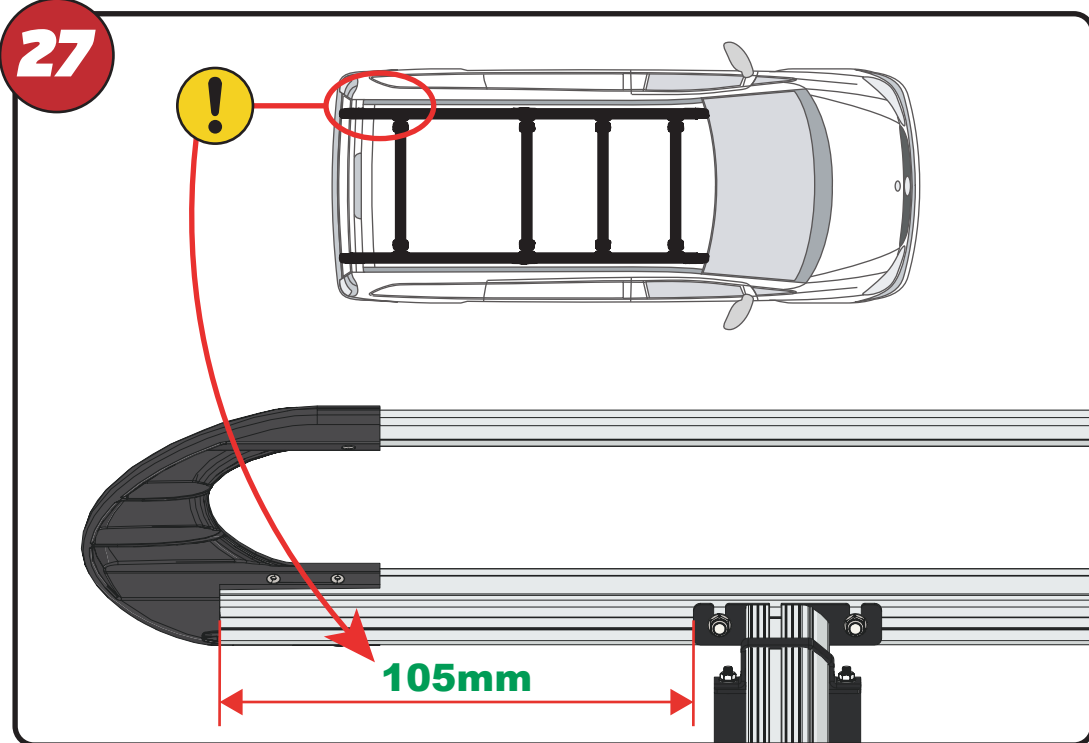


28

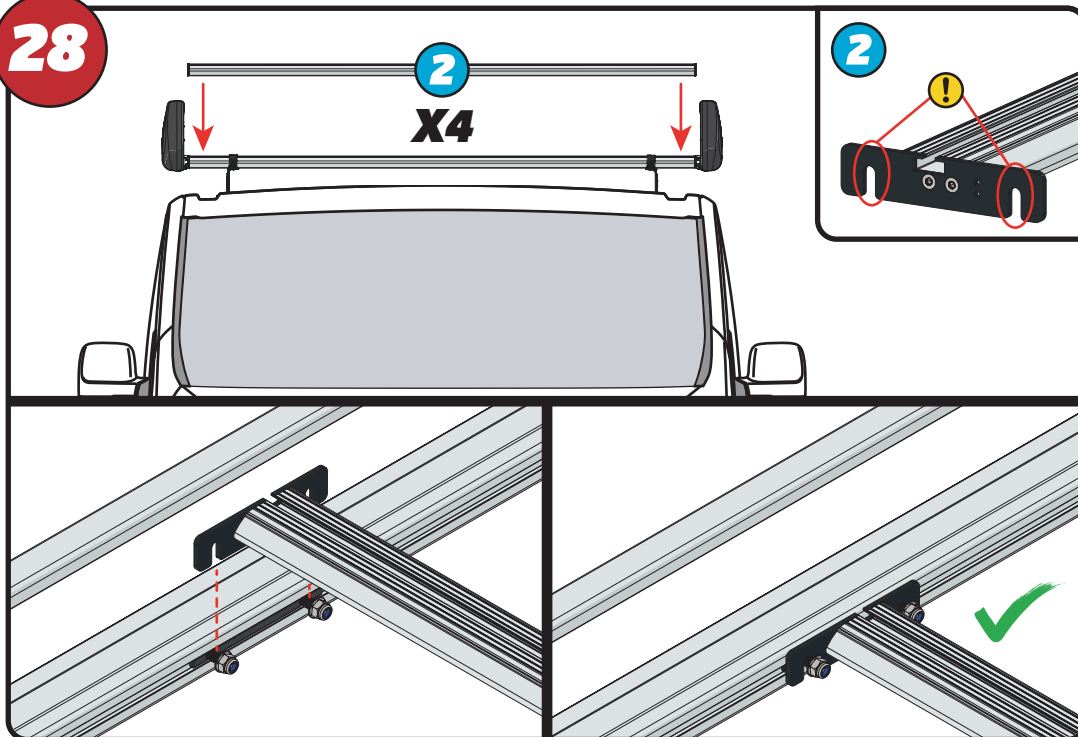

29

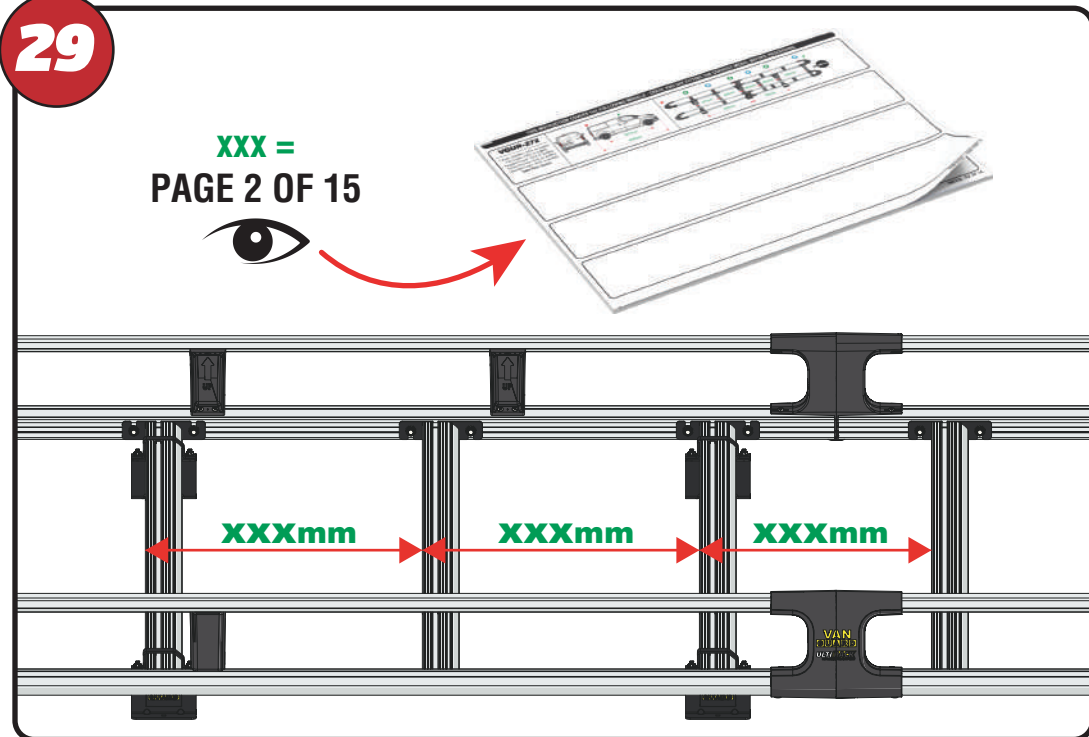


30

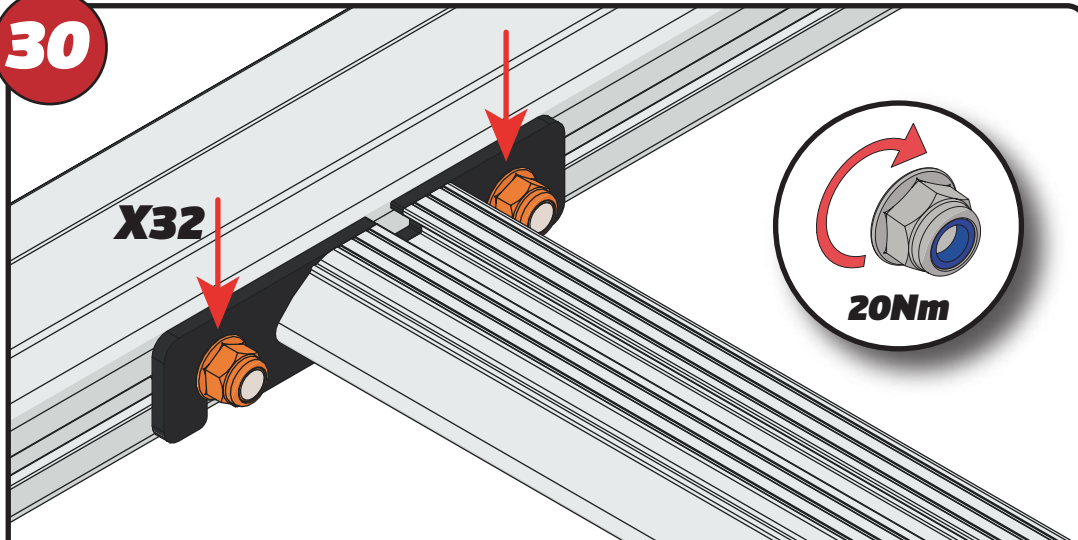



EN - TIGHTEN ALL OF THE CROSS BARS
 DE - ALLE QUERSTANGEN FESTZIEHEN
 FR - SERREZ TOUTES LES BARRES TRANSVERSALES
 NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
 ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
 IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
 DA - SKRU ALLE TAGBØJLER OP
 NO - SKRU OPP ALLE TVERRSTENGER
 PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
 CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE


31

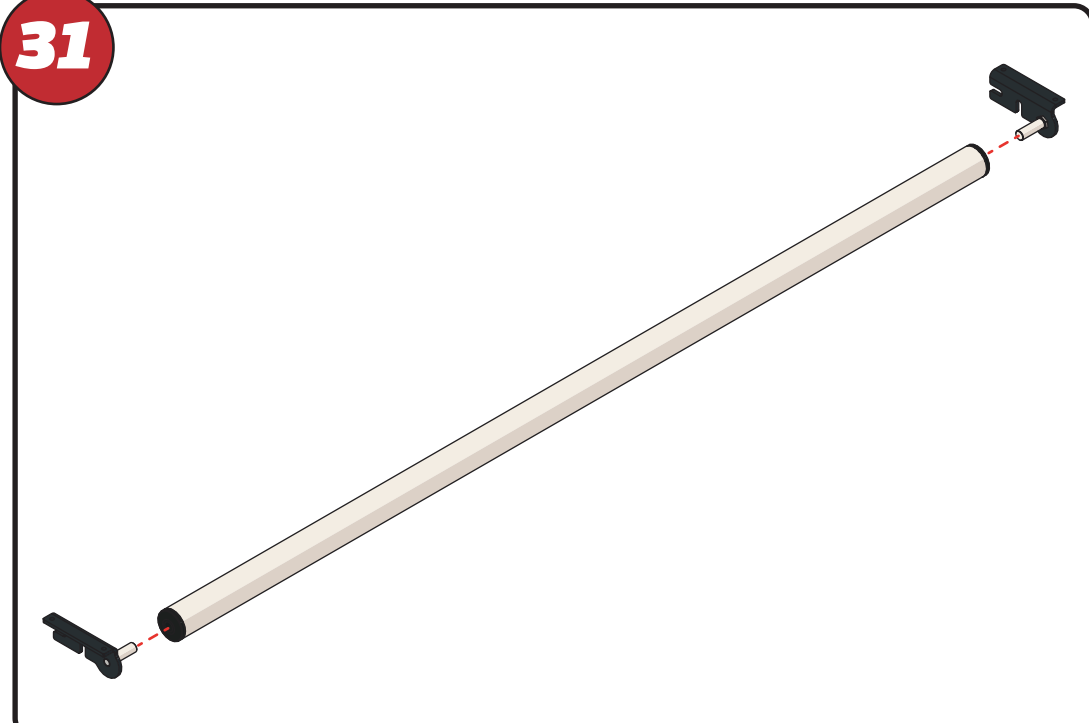


32

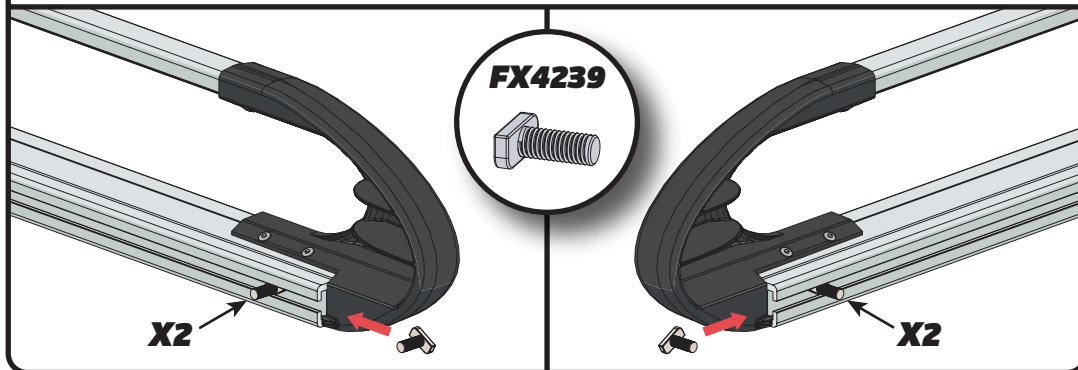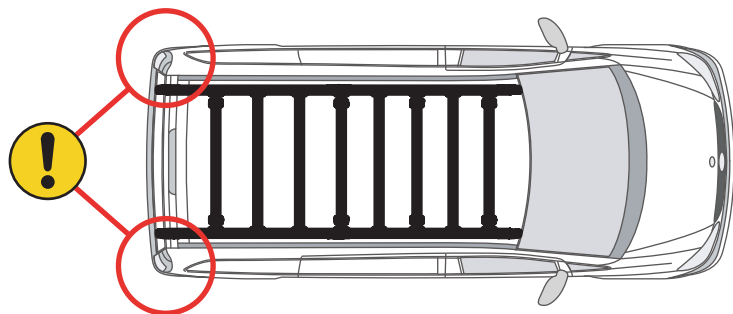


33

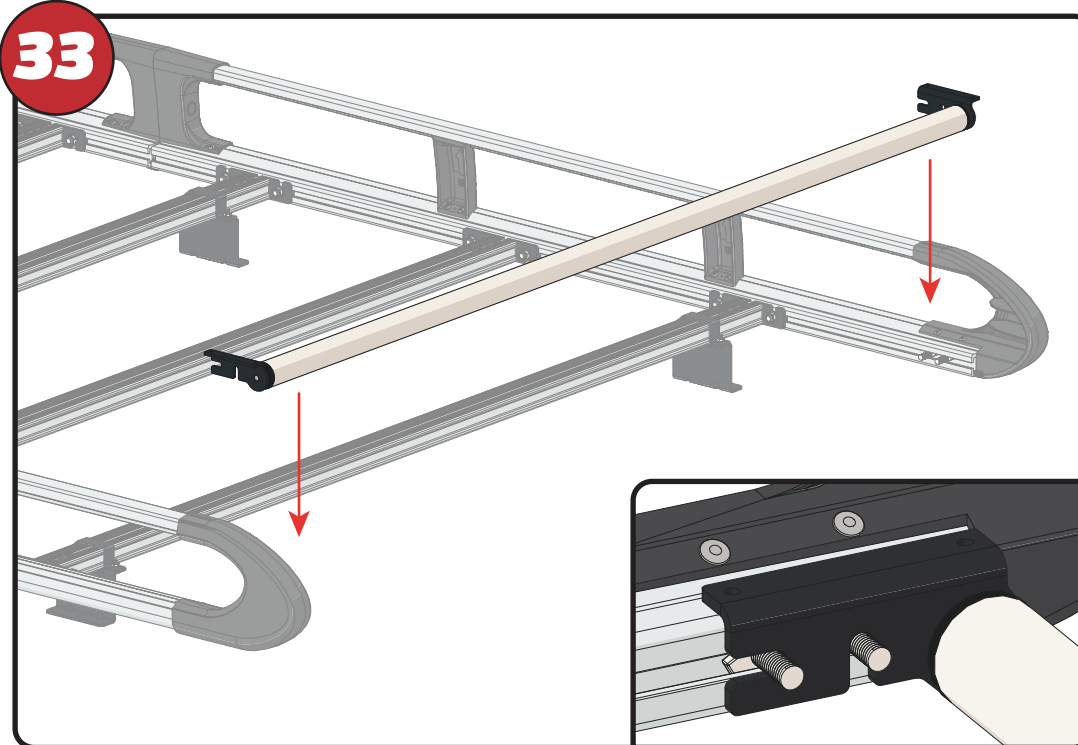


34

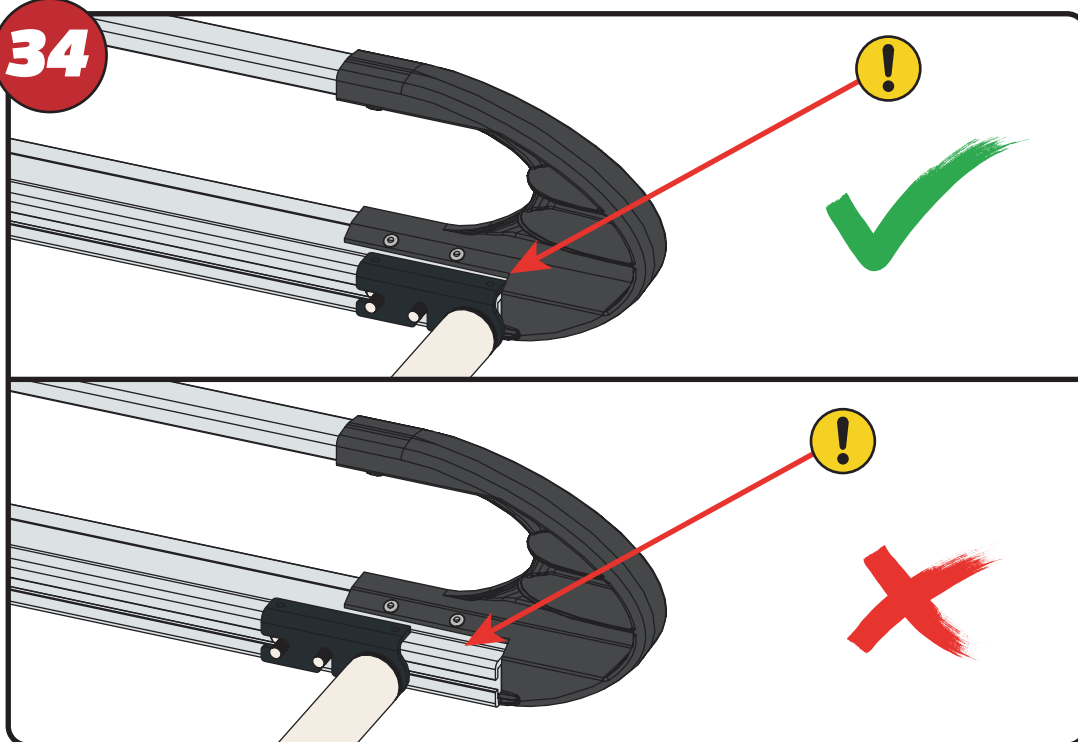


35

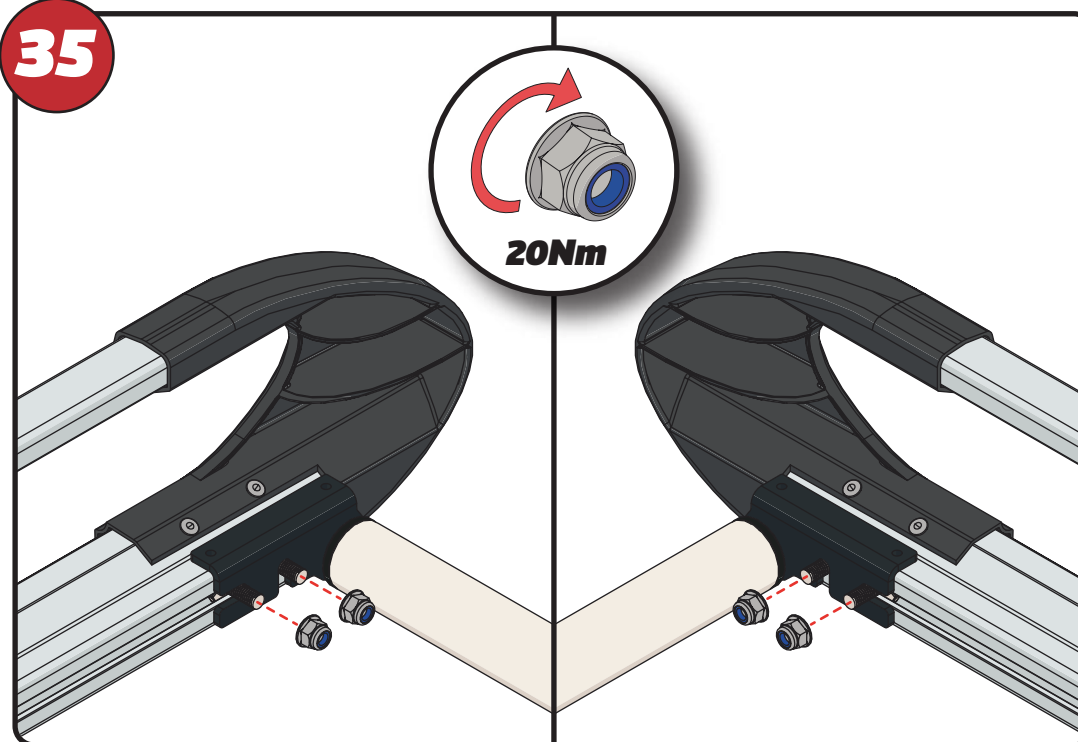


36

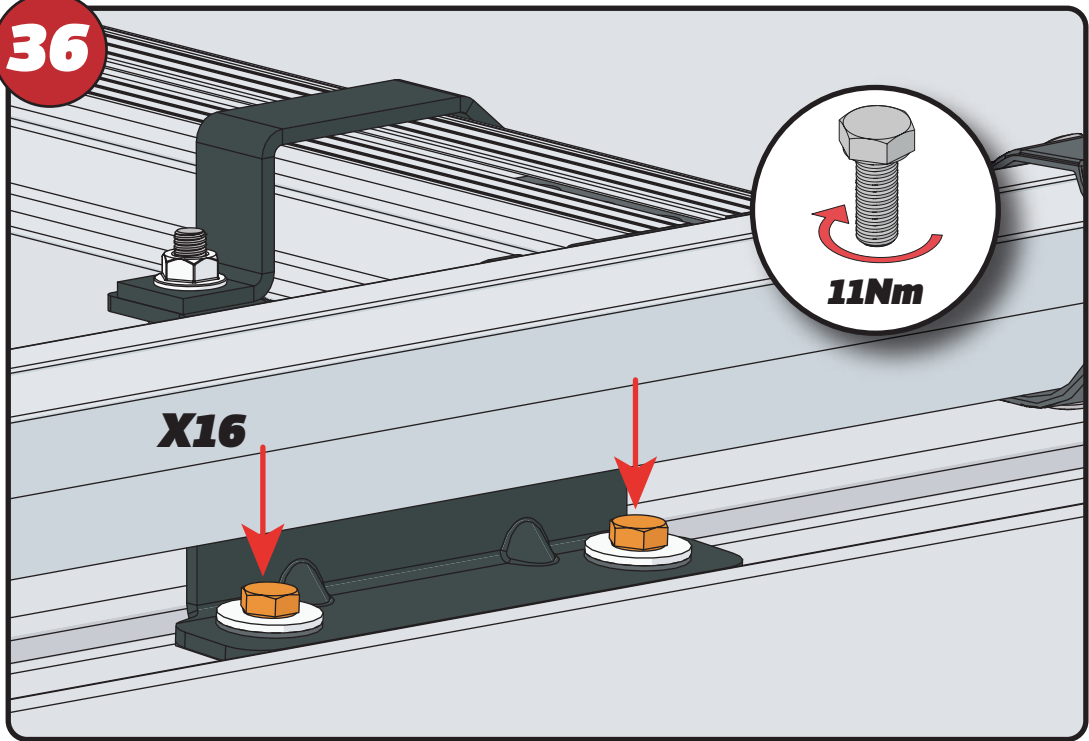


37

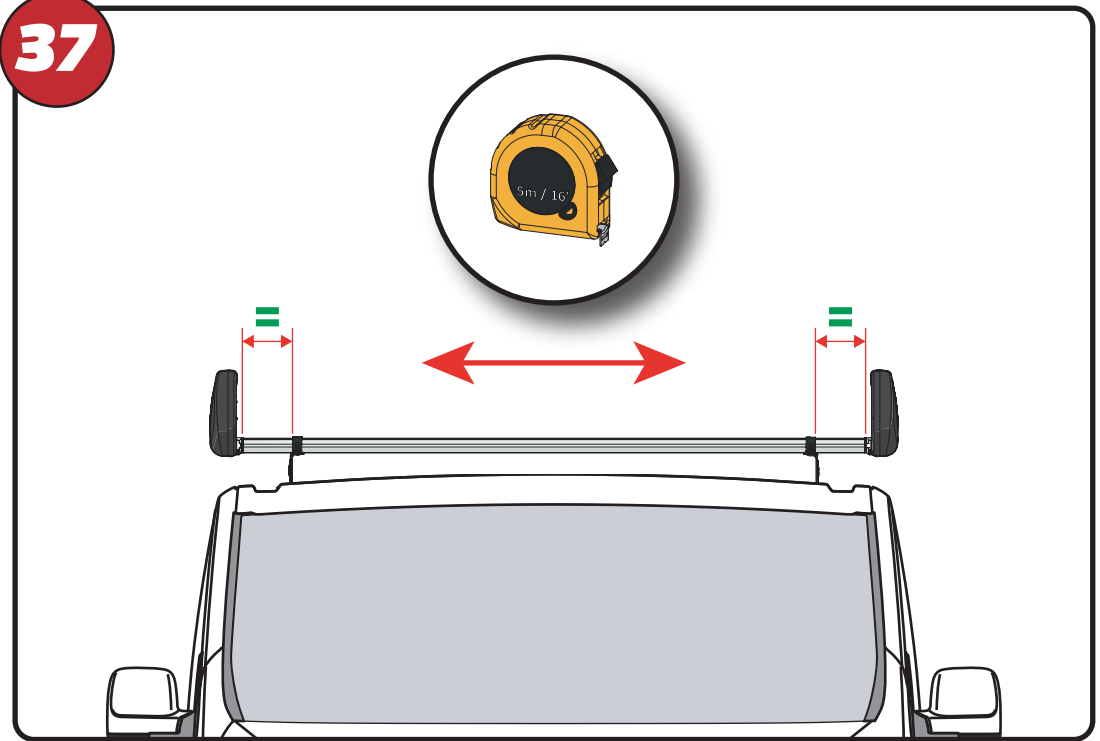


38

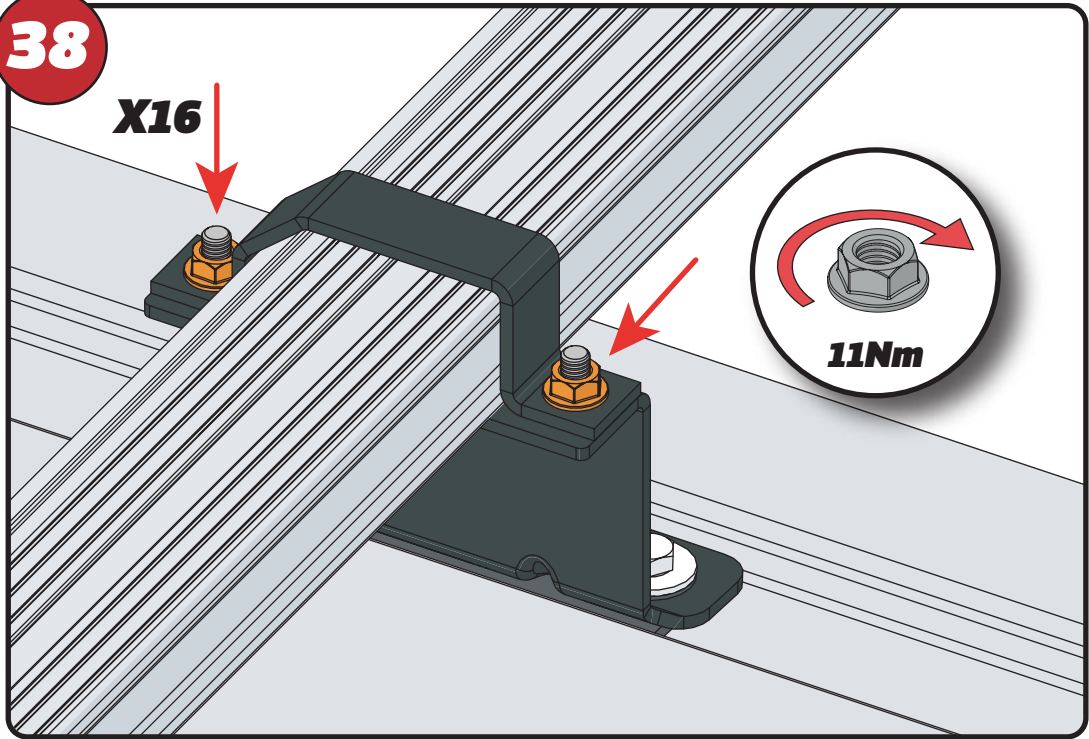


39

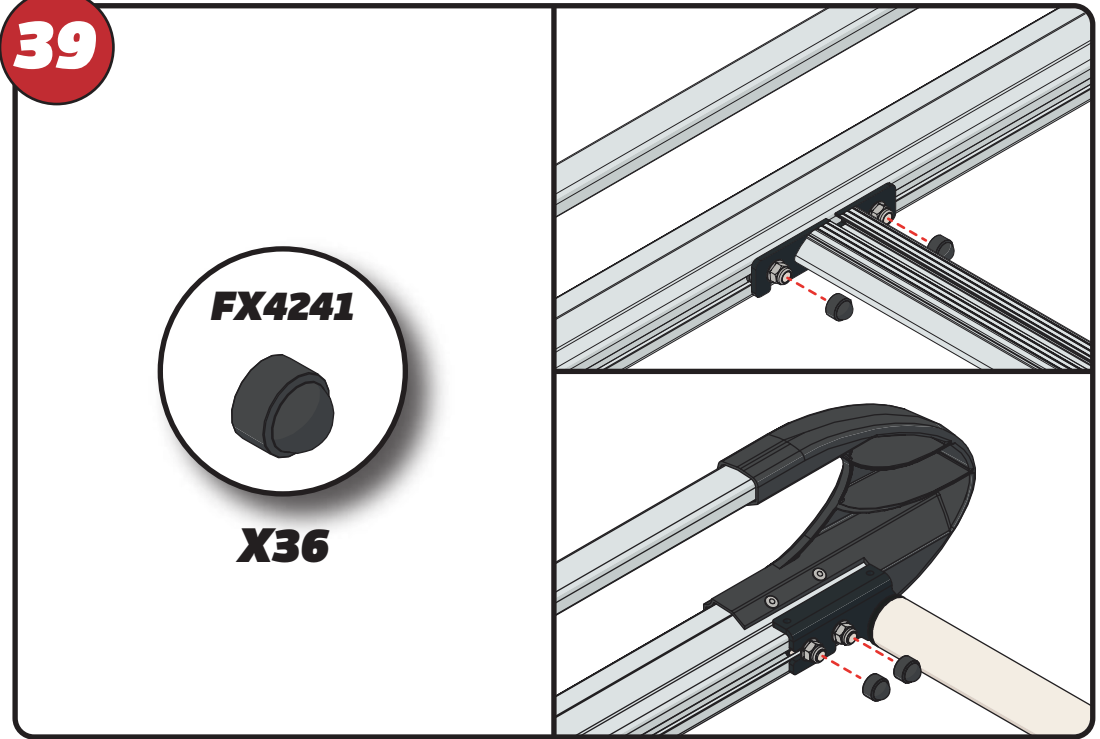

40

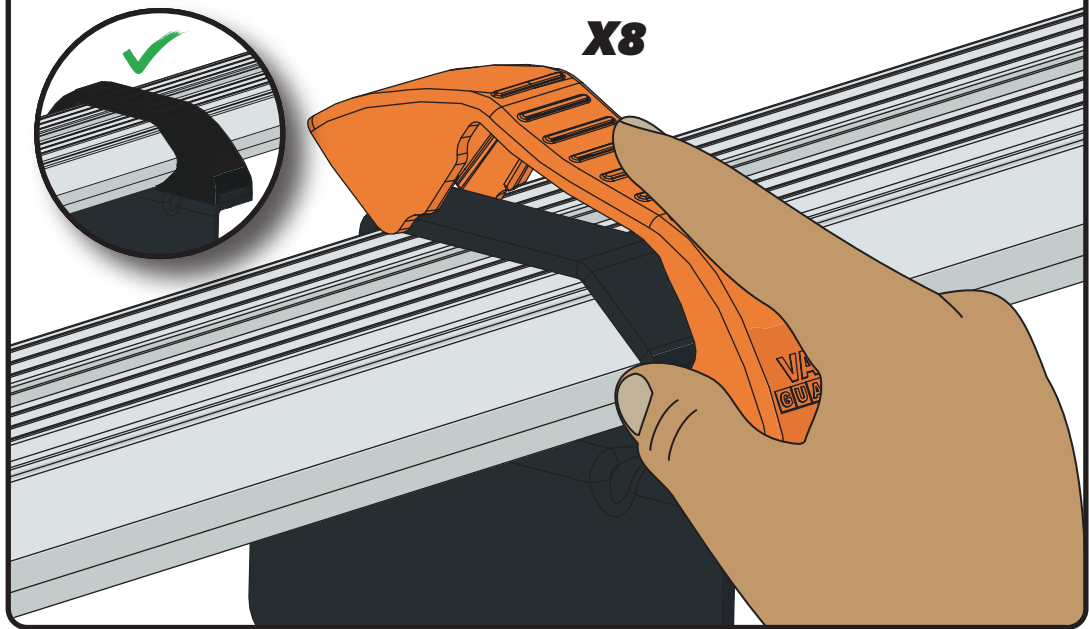

41

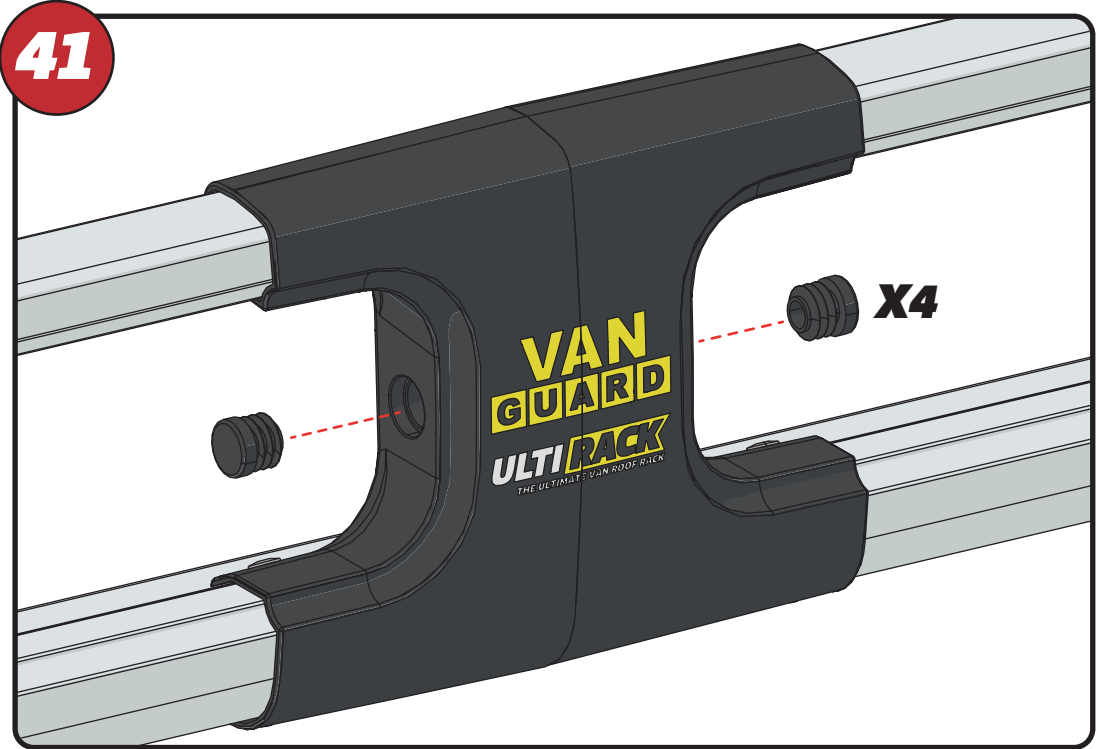

42

