




PRO-STEP™

Fitting Instruction

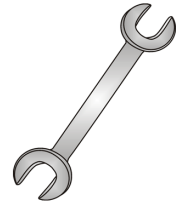


Issue 1

PRO-TPUG12

Item	Qty	Description
A	1	PRO-TPUG12 STEP
B	4	M12 x 50 Bolts (10.9) & 4 Nyloc Nuts
C	4	12 x 40 Flat Washers
D	4	12 x 25 Flat Washers
E	8	Black M12 Bolt Caps

1. Using Item B with Item C and Item D loosely fix the side arms (Items B on TPUG12 Towbar instruction) through the forward mounting point only as per Fig.1 in the sketch below leaving the fixing loose enough to enable you to slide Item A through the open slot (Fig.2).
2. Using Item B with Item C and Item D fix Item A through the remaining fixing point.
3. Fully tighten all fixings ensuring the Towbar and Pro-Step are rigid, square and secure.

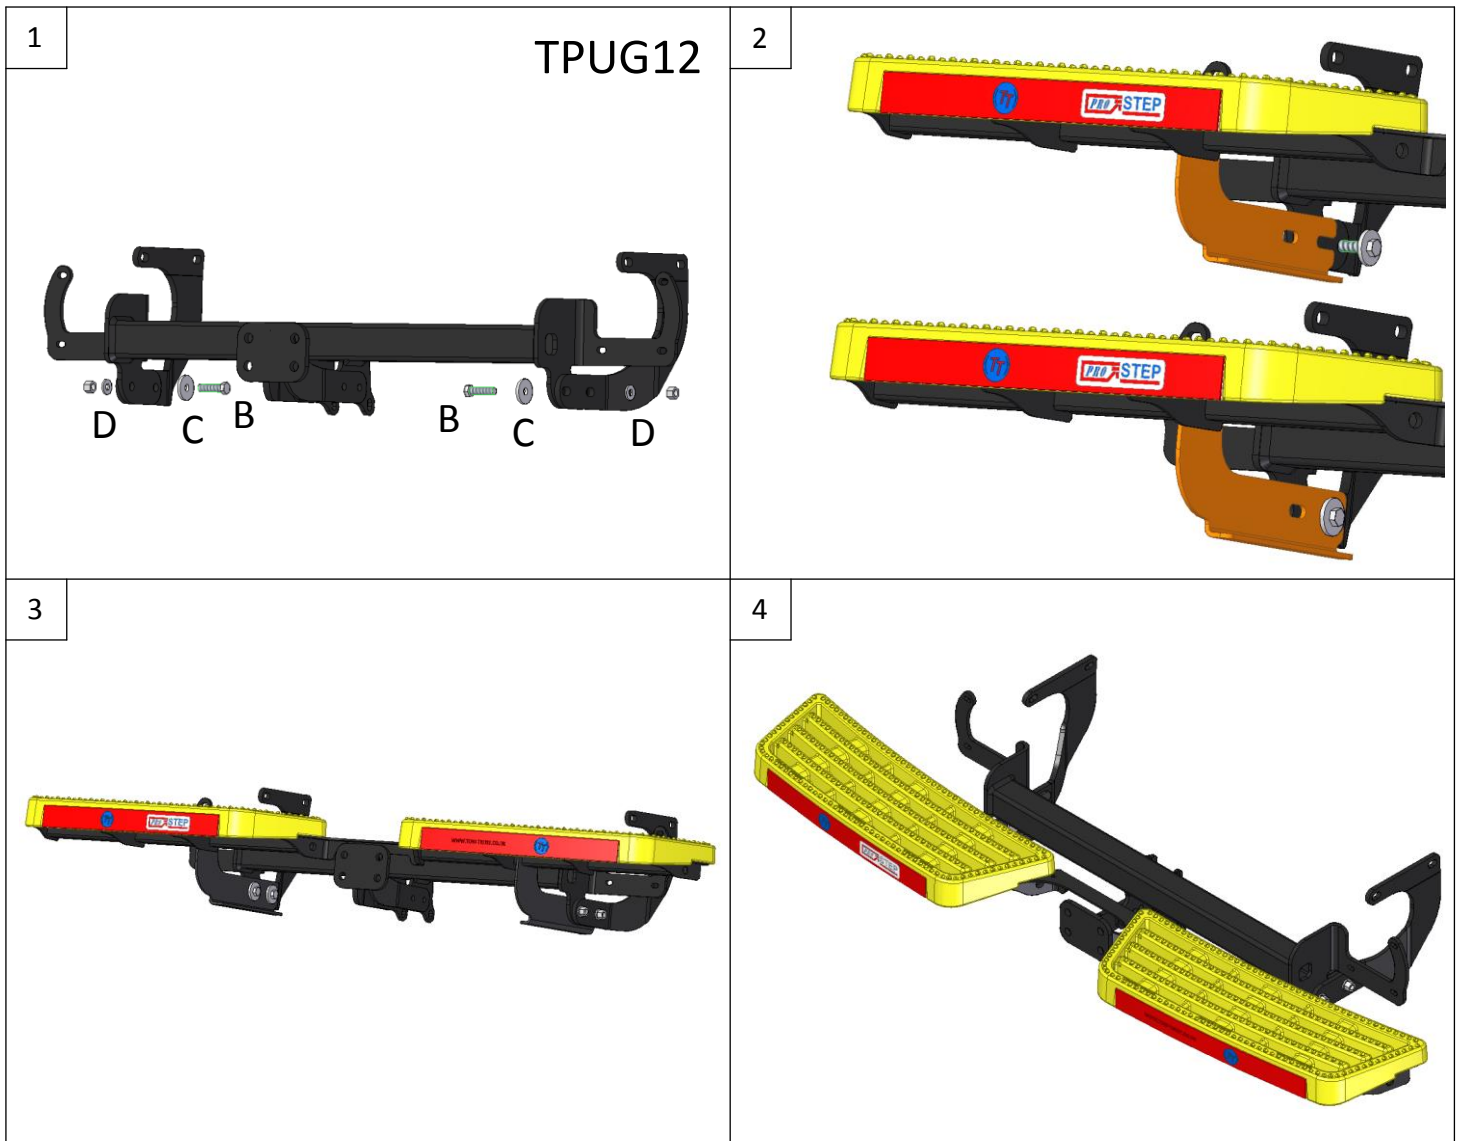

Note:

1. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.