




PRO-STEP™

Fitting Instruction

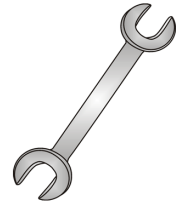

Issue 1

PRO-TR8-NT

Item	Qty	Description
A	1	PRO-TR8-NT STEP
B	2	Handed Side Arms
C	10	M12 x 40 Bolts, 4 Nyloc Nuts & 6 S/P Washers
D	4	12 x 25 Flat Washers
E	10	12 x 40 Flat Washers
F	8	Black M12 Bolt Caps

1. Remove the Towing eye from the N/S chassis member. (This is NOT refitted with step assembly)
2. Using Item C with Item E fix Items B to each correct chassis member.
3. Using Item C with Item E and Item D loosely assembly the fixing through the forward mounting point only leaving the fixing loose enough to enable you to slide Item A through the open slot.
4. Using Item C with Item E and Item D fix Item A to Item B through the remaining mounting point.
5. Fully tighten all fixings ensuring the Pro-Step is rigid, square and secure.

