




# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

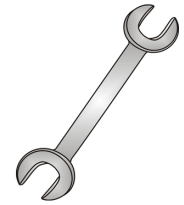

Issue 6

## TC717 MITSUBISHI SHOGUN 2000 - 2007 SWB & LWB 2007> SWB & LWB

Page 1

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	J	2	M16 x 50 Bolts Nuts & S/P Washers
B	2	Side Arms	K	2	M14 x 100 Bolts & Nyloc Nuts
C	1	Extension	L	8	M12 x 35 x 1.25 Bolts & S/P Washers
D	2	Handed Angle Brackets	M	10	M12 x 40 Bolts, 8 Nuts & 10 S/P Washers
E	2	Handed Small Brackets	N	4	M12 x 110 Bolts, 2 Nuts & 4 S/P Washers
F	1	Air Conditioner Bracket	P	1	M6 x 50 Bolt & S/P Washer & Flat Washer
G	2	Small Bumper Brackets	R	4	Small Plastic Rivets
H	2	Handed Large Bumper Brackets	S	4	14 x 27 Flat Washers
			T	20	12 x 25 Flat Washers
			W	4	M6 x 16 Bolts, Nuts, Flat Washers & S/P Washers
			Y	1	Socket Plate (TC717-11)


### SHORT WHEEL BASE

1. Remove the towing eye beam, four fixings either side. NOTE; 2000–2007 models have fixings along lower edge of bumper). This beam is not refitted with towbar.
2. Using Item **L** and Item **T** loosely bolt Items **D** to the bottom face of each chassis.
3. Using Items **M** and Item **T** loosely bolt Items **B** to Items **D**.
4. Using Item **L** and Item **T**, loosely bolt Items **B** to the inside face of each chassis.
5. From the outside face of each chassis use Item **N** and Item **T** to bolt Items **B** to the chassis.
6. At this stage identify year of vehicle, and if required use the plastic rivets (Item **R**) to attach Items **G** and Items **H** to Item **A**. SEE SKETCH.
7. Using Item **M** loosely fit Item **A** between Items **B**.
8. On 2000-2007 models reattach lower edge of bumper to the new bumper fixings using Items **W**.
9. Using Item **K** and Item **S** bolt Item **C** and Item **Y** to Item **A** in the suitable hole location for customers requirements.
10. Using Item **J** bolt the ball bracket (not supplied in this kit) to the face plate of Item **C**.
11. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

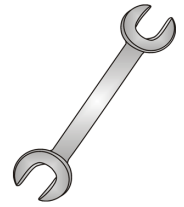

## TC717 MITSUBISHI SHOGUN 2000 - 2007 SWB & LWB 2007> SWB & LWB

Page 2


### LONG WHEEL BASE

1. Locate air conditioning unit on right hand underside of the vehicle and temporarily lower. (Four vertical fixing, and discard the bracket that secures the unit to the chassis).
2. Remove the towing eye beam, four fixings either side. NOTE; 2000-2007 models have fixings along lower edge of bumper). This beam is not refitted with towbar.
3. Using Item **L** and Item **T** loosely bolt Items **D** to the bottom face of each chassis.
4. Using Items **M** loosely bolt Items **B** and Items **E** to Items **D**.
5. Using Item **L** and Item **T**, loosely bolt Items **B** to the inside face of each chassis.
6. From the outside face of each chassis use Item **N** and Item **T** to bolt Items **B** and Items **E** to the chassis. SEE SKETCH.
7. At this stage identify year of vehicle and, if required use the plastic rivets (Item **R**) to attach Items **G** and Item **H** to Item **A**. SEE SKETCH.
8. Using Item **M** loosely fit Item **A** between Items **B**.
9. On 2000-2007 models reattach lower edge of bumper to the new bumper fixings using items **W**.
10. Using Item **K** and Item **S** bolt Item **C** and Item **Y** to Item **A** in the suitable hole location for customers requirements.
11. Using Item **J** bolt the ball bracket (not supplied in this kit) to the face plate of Item **C**.
12. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
13. Refit the air conditioning unit using Item **F** and Item **P** to reattach it to the chassis.




# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

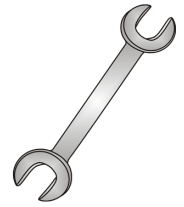


## TC717 SHORT WHEEL BASE

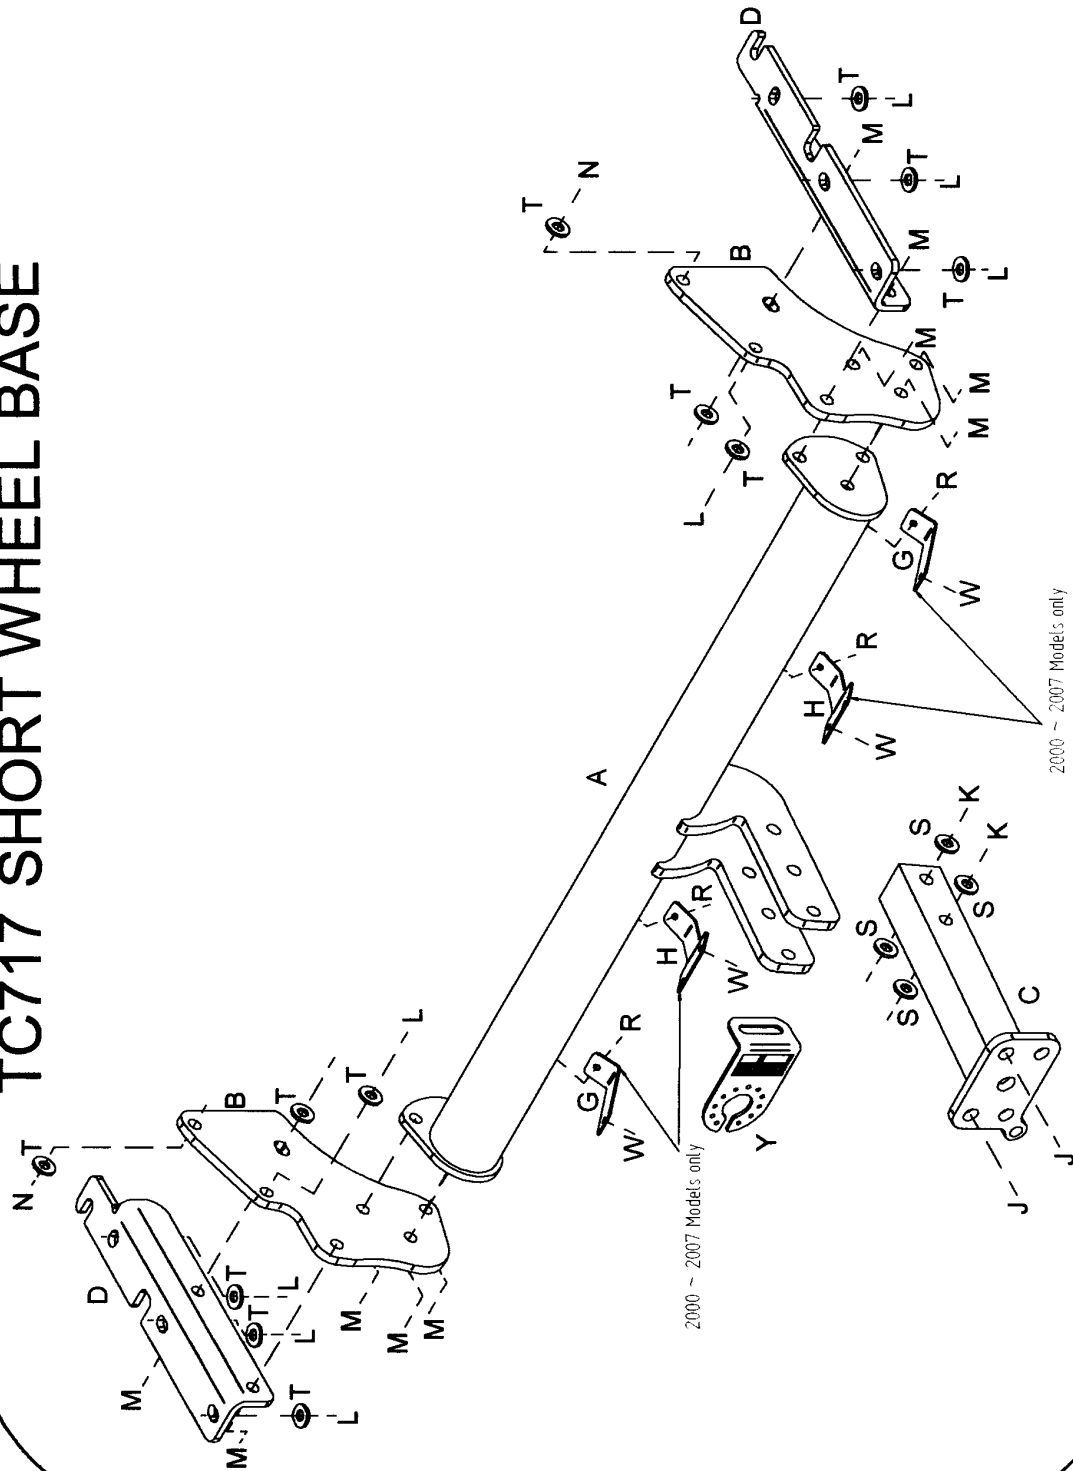




# Tow-Trust Towbars


Important: Please read General Notes overleaf before fitting

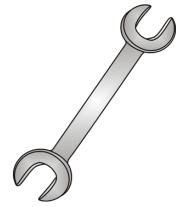

## TC717 LONG WHEEL BASE

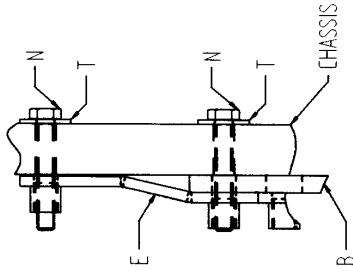

TOP VIEW OF RIGHT ARM

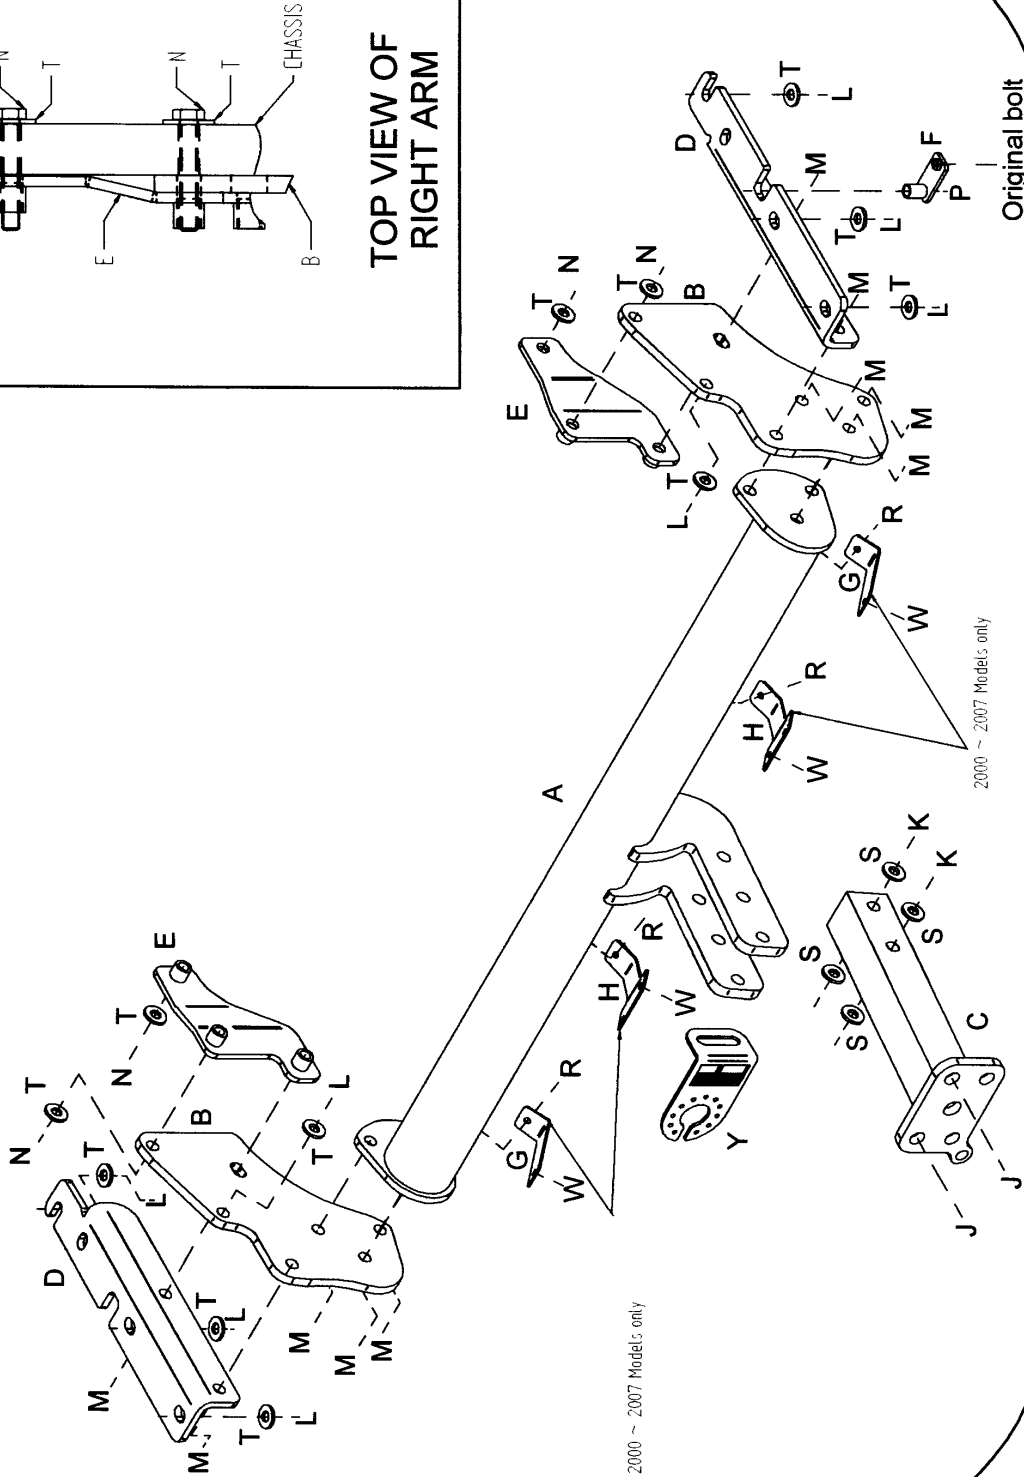

2000 ~ 2007 Models only

2000 ~ 2007 Models only

Original bolt