

## TFD22 FORD PUMA 2019> (Not ST-LINE)


Item	Qty	Description	Item	Qty	Description
A	1	TFD22 Crossmember	D	2	M16 x 50 Bolts & Nyloc Nuts
B1	1	L/H Side Arm	E	8	M12 x 40 Bolts, 4 Nyloc Nuts & 4 S/P Washers
B2	1	R/H Side Arm	F	2	M12 x 40 Bolts & Nyloc Nuts
C	1	Extension	G	1	M12 x 120 Bolt & Nyloc Nut
			H	4	12 x 30 Flat Washers
			J	12	12 x 25 Flat Washers
			T2	1	30mm O/D x 60mm Long Spacer Tube

### BUMPER REMOVAL:

1. Remove the rear light clusters, open tailgate & remove the plastic inner cover from each light cluster to reveal one fixing per cluster. (Pull rearwards so clips don't break).
2. Remove wheel arch trim to reveal one tip fixing, remove two fixings from the wheel arch liner.
3. Remove six fixings from the bumper lower edge. (Some models may have eight fixings).
4. Carefully pull bumper out sideways to release from vehicle body then rearward to remove, unplug fog light and reversing sensors.
5. Remove the rear impact (This is not refitted with the Towbar assembly).
6. Remove plastic brackets covering rearmost mounting points from either side of the vehicle, one screw and four clips per bracket.

### TOWBAR INSTALLATION:

1. Insert Item **B1** into the N/S chassis and Item **B2** into the O/S chassis and fix in place at the forward mounting point only using Items **E** and Items **H**.
2. Insert Item **A** between each side arm and into the open ends of the chassis and fix through the rearmost mounting point on the vehicle using Item **E** and Items **H**.
3. Using Item **E** with Item **J** fix the side arms to Item **A**.
4. Fully tighten all fixings ensuring the Towbar is rigid, square and secure.
5. Refit the plastic brackets, rear bumper and light clusters.
6. Fix Item **C** to Item **A** using Items **F** with Items **J** and Item **G** with Item **J** ensuring Item **T2** is fitted between the lower mounting point.
7. Using Item **D** fix your desired ball bracket and wiring plate (Not supplied in this kit) to Item **C**.
8. Fully tighten all remaining fixings.

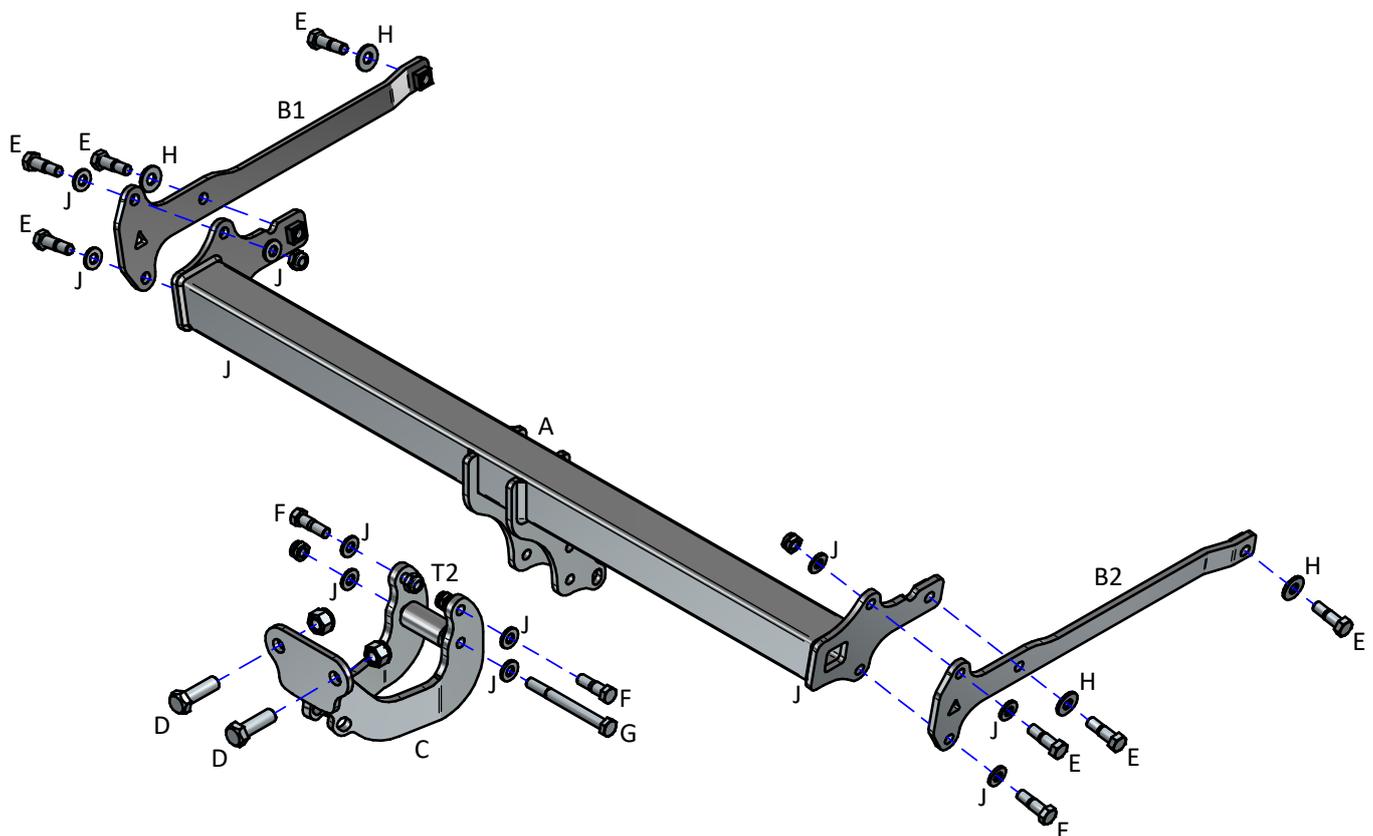

### Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.