



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 4

TK10 Hyundai i30 Hatch 2007 - 2012

Kia Cee'd Est 2007> Cee'd Hatch 2007 - 2012

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M16 x 50 Bolts, Nuts & S/P Washers
B	2	Handed Side Arms	F	4	M12 x 40 Bolts & S/P Washers
C	1	Extension Bar	G	8	M10 x 35 Bolts, 6 Nuts & 8 S/P Washers
D	2	Angle Brackets	H	6	M10 x 40 x 1.25 Bolts & S/P Washers
			J	10	10 x 25 Flat Washers
			K	4	12 x 25 Flat Washers

1. Locate towbar mounting points and remove any mastic from around them.
2. Using Item H with Item J loosely bolt the two angle brackets (Item D) to the bottom face of each chassis.
3. Using Item H with Item J loosely bolt the handed side arms (Item B) to the outside face of each chassis, noting the correct arm for the correct side (see sketch).
4. Using Item G, bolt Item B and Item D together but do not fully tighten at this stage.
5. Using Item G with Item J, bolt Item A between the handed side arms (Items B).
6. Using Item F with Item K, bolt the extension bar (Item C) to Item A. **NOTE:** Vehicle models fitted with black diffuser on rear bumper requires Item C to be fitted on the rear most setting.
7. Fully tighten all nuts and bolts and ensure the towbar is rigid, square and secure.
8. Ensure there is good clearance around the exhaust and Item A, and if needed, adjust the exhaust hanger to suit.
9. Using Item E, bolt the ball bracket and wiring plate (not supplied in kit) to mounting plate, and fully tighten.

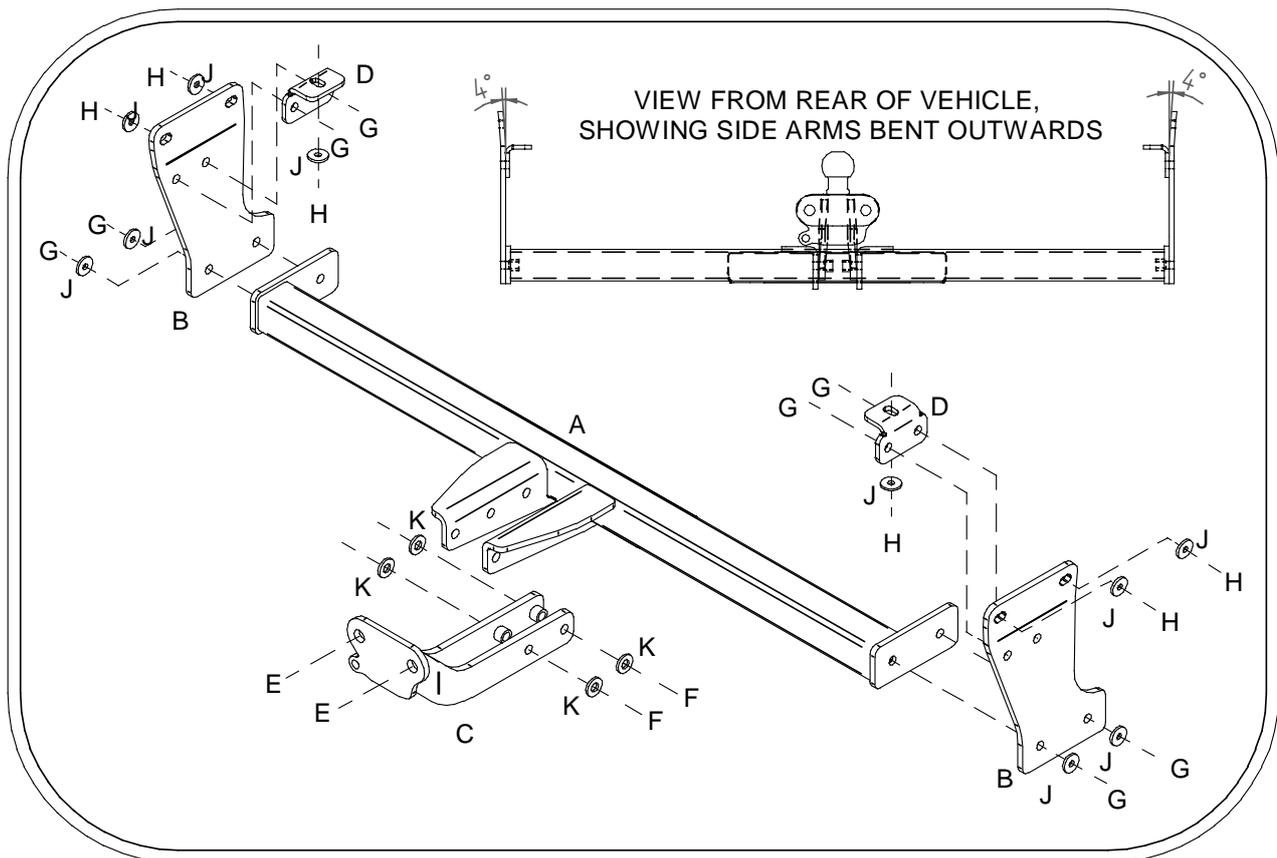

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.