


TLDV2 Deliver 9 Chassis Cab (With OEM Towing Brackets) 2020>

Item	Qty	Description	Item	Qty	Description
A	1	TLDV2 Crossmember	F	2	M16 x 40 Bolts & Nyloc Nuts (Must Be Fitted)
B	2	Side Arms	G	2	M16 x 65 Bolts & Nyloc Nuts
C1	1	Left Hand Angle Bracket	H	4	M14 x 50 Bolts, 2 S/P Washers & 2 Nyloc Nuts
C2	1	Right Hand Angle Bracket	J	4	M14 x 110 Bolts & Nyloc Nuts
D	2	Captive Nut Plate	K	4	M12 x 35 Bolts & S/P Washers
E	1	Clamp Plate (Must Be Fitted At All Times)	L	14	14 x 27 Flat Washers
			M	4	12 x 40 Flat Washers

TOWBAR INSTALLATION:

- Fix Items **B** to the inside face of the towing brackets using Items **J** and Items **L**.
- Insert Item **D** inside of the towing brackets and locate above the vertical mounting points.
- Fix Items **C1** and **C2** to the towing brackets at the vertical mounting points using Items **K** and Items **M** fixing into Item **D**.
- Fix Item **A** to Items **B**, **C1** and **C2** using Items **H** and Items **L**.
(Note: Fit Item **A** to the setting that suits the vehicles body the best using Fig 1 for longer projecting bodies and Fig 2 as the standard setting especially on tipping bodies).
- Using Items **F** through the setting not used for the towball loosely fix Item **E** to the rear of the Face Plate.
(Always Follow This Before Fitting Towball)
- Using Item **G** fix your desired ball bracket and socket plate (not supplied in this kit) to Item **A**.
- Fully tighten all fixings, ensuring the Towbar is rigid, Square and Secure.

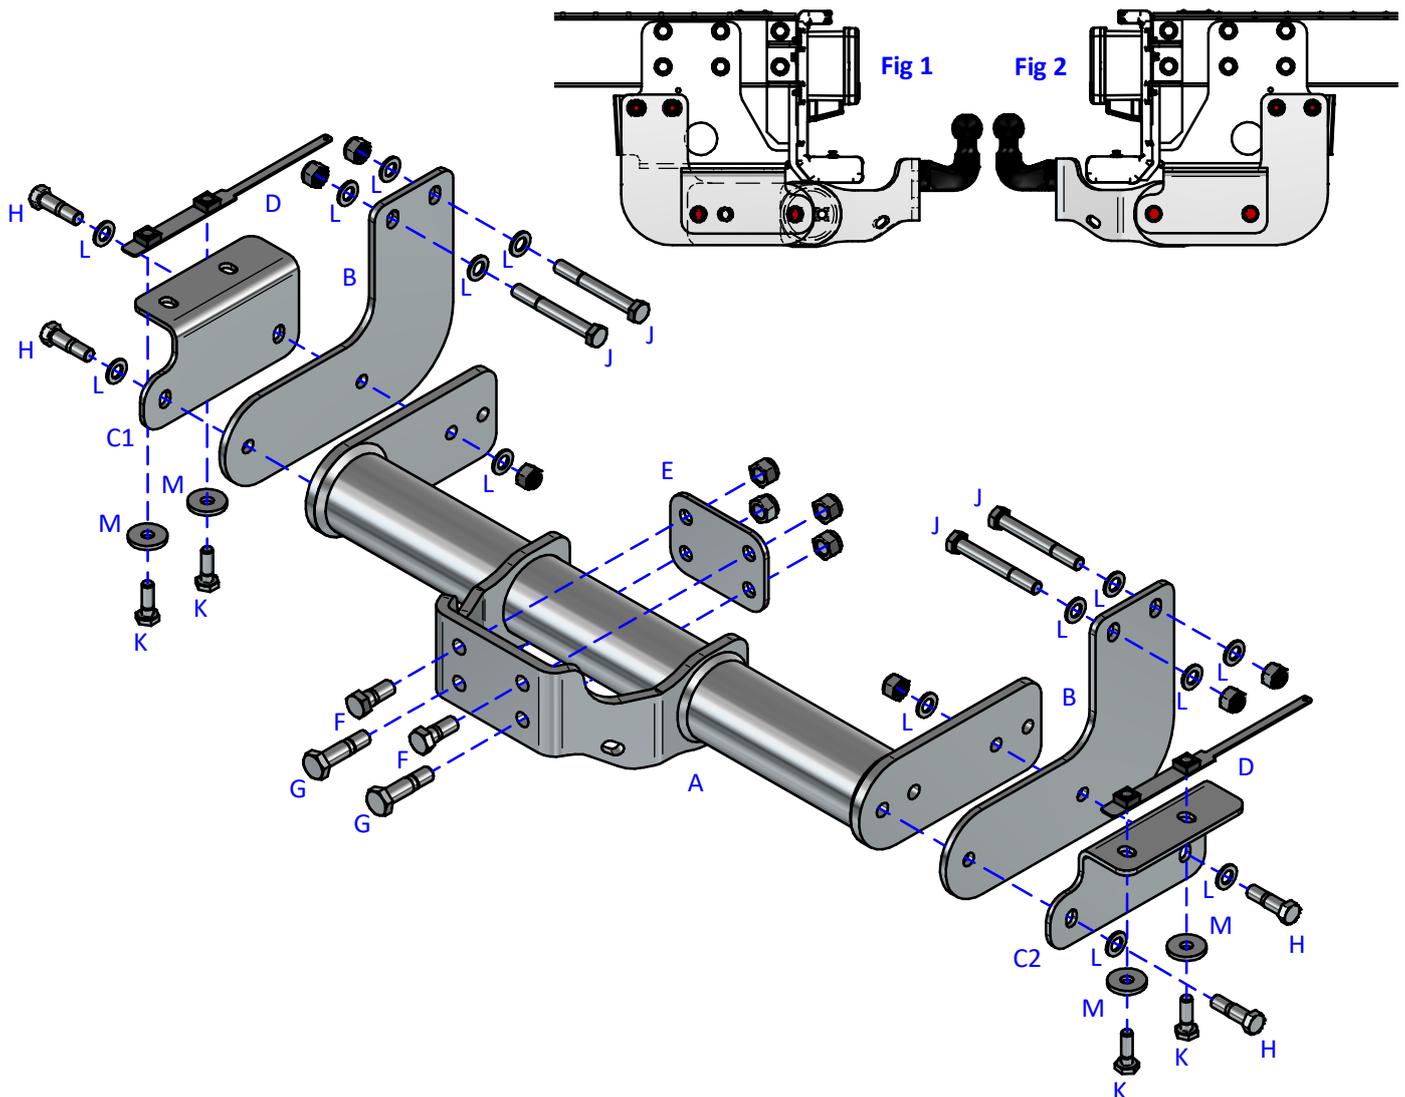

Notes:

- For Torque settings see general notes overleaf.
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.