

Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 6

TM6 Mercedes Sprinter Van (With Step) 2006> VW Crafter Van (With Step) 2006>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	2	M16 x 50 Bolts, Nuts & S/P Washers
B	2	Side Arms	E	8	M12 x 110 Grade 10.9 Bolts & Nyloc Nuts
C	1	Coupling Spacer	F	6	M12 x 45 Bolts Grade 10.9 & 4 Nyloc Nuts & 2 S/P Washers
			G	26	12 x 25 Flat Washers

1. Remove the four bolts each side securing the step brackets to the chassis.
2. Using Item E with Item G loosely bolt Items B to the outer face of each chassis member.
3. Using Item F with Item G bolt Item A to Item B.
4. Using Item D bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
Note: Coupling spacer (Item C) is provided if required.
5. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

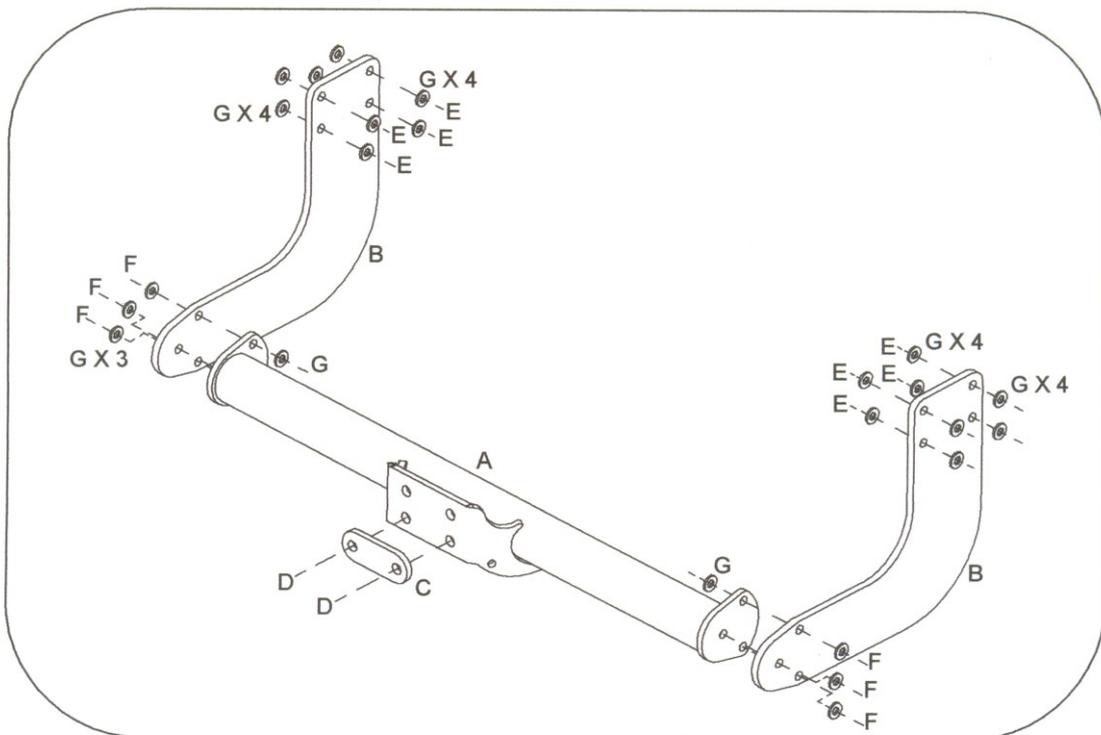

Note: nose load limits and vehicle manufacturers' trailer / caravan weight limits must be observed.