



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting  
Issue: 2



Fitting  
Instruction

## TN15 NISSAN CABSTAR / NISSAN NT400 / RENAULT MAXITY / MITSUBISHI FUSO CENTER


Item	Qty	Description	Item	Qty	Description
A	1	TN15 Crossmember	D	2	M16 x 60 Bolts & Nyloc Nuts
B	2	Side Arms	E	20	M10 x 40 Bolts (10.9) & Nyloc Nuts
C	2	Handed Light Board Brackets	F	6	M14 x 45 Bolts & Nyloc Nuts
X	2	5mm Spacers For 700mm Chassis Only	G	4	M8 x 25 Bolts & Nyloc Nuts
			H	40	10 x 25 Flat Washers
			J	12	14 x 27 Flat Washers
			K	8	8 x 25 Flat Washers
			L	2	88.9mm O/D Black End Caps (RTi1164)

### TOWBAR INSTALLATION:

1. Remove the two fixings securing the lighting board to the left hand chassis bracket, remove the mounting bracket from the chassis (this is no longer required).
2. Using Item E and Item H fix Item B and Item C to the left hand chassis.
3. Using Item G and Item K fix Item C to the lighting board.

NOTE: It may be necessary to adapt the original lighting board brackets and not use Items C.

4. Repeat above instructions for the right hand side.
5. Using Item F and Item J fix Item A between Items B (750mm Chassis).
6. Using Item F and Item J fix Item A on the outside face Items B sandwiching Item X between them. (700mm Chassis)
7. Using Item D fix your desired ball bracket (not supplied in this kit) to the mounting plate.
8. Fully tighten all fixings ensuring the Towbar is rigid, square and secure.

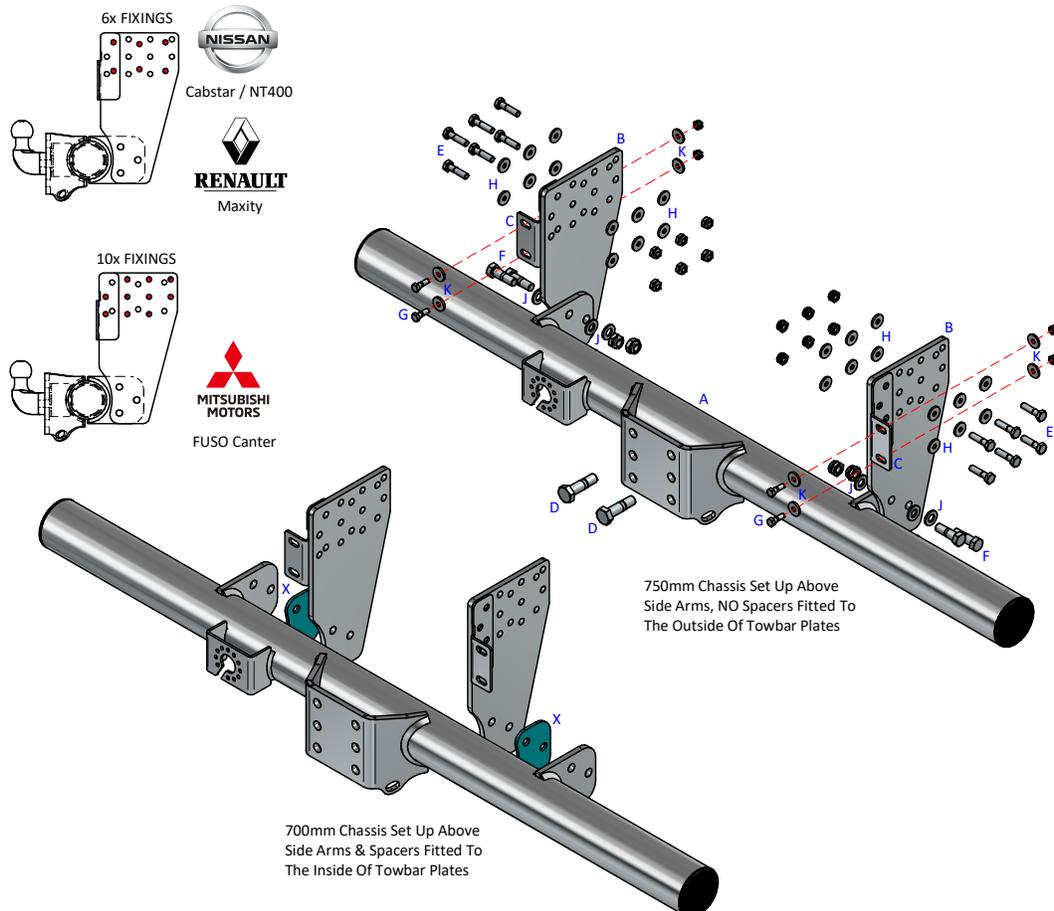

### Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.