



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 3

## TVV521 Volvo S60 2000 - 2010>

Item	Qty	Description	Item	Qty	Description
A	1	Towbar	C	2	M16 x 50 Bolts Nuts & S/P Washers
B	1	Heat Shield Plate	D	6	M12 x 40 Bolts & S/P Washers
			E	6	12 x 25 Flat Washers
			F	1	Pop Rivet

1. Remove the towing eye from the right hand chassis.
2. Remove the two bolts securing the rear exhaust hanger and one pop rivet on the heat shield. (The exhaust hanger is not re-fitted with the towbar).
3. Using item **D** with item **E** bolt item **A** to the existing captive nuts in each chassis member.  
**NOTE** bolt item **B** to the forward left hand bolt to reattach the heat shield with the rivet supplied (item **F**).
4. Re-fit the exhaust onto the mounting point provided.
5. Using item **C** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
6. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure

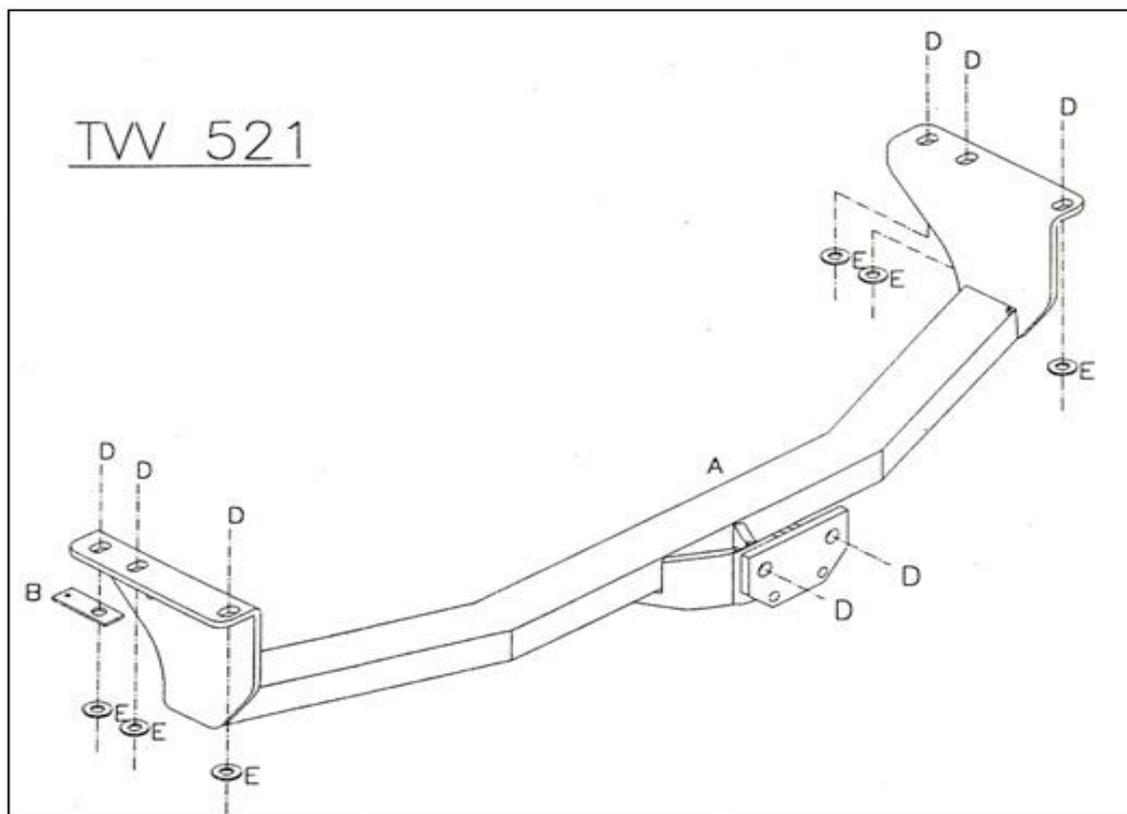

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.