

TVW26SN Volkswagen T-Cross 2019>

Item	Qty	Description	Item	Qty	Description
A	1	TVW26 Crossbar	F	2	15mm Swan Neck Spacers
B1	1	Left Hand Side Arm	G	2	M12 x 110 (10.9) Bolts & Nyloc Nuts
B2	1	Right Hand Side Arm	H	4	M6 x 20 Self Tapping Bolts
			J	4	M12 x 35 Bolts & S/P Washers
D	1	9201/ACS1 Swan Neck	K	4	M12 x 45 Bolts & Nyloc Nuts
E	1	VASP8/LH	L	4	6 X 15 Flat Washers
			M	12	12 x 25 Flat Washers
X		OEM GSM Ariel	N	4	12 x 30 Flat Washers


Bumper Removal:

1. Open tailgate and remove light clusters, one fixing behind boot trim panel each side.
2. Remove the three fixings from the wheel arch liner and mudguards if fitted and the tip screw from each side.
3. Remove the nine fixings from the lower bumper edge.
4. Pull bumper out sideways and release clips from under the light clusters pull rearwards, unplug the reversing sensors and number plate lights, and fully remove. (Cut bumper as shown in Figure 2).
5. Remove item X, one fixing from off the rear crash beam if fitted, then remove the crash beam, seven fixings.
Note: (This will not be refitted with the towbar assembly). Refit the fixings into the rear panel to prevent water ingress.
6. Separate the charcoal cannister from the offside chassis to gain access to the mounting point, two fixings.

Towbar Installation:


1. Loosely fix items B1 and B2 to the correct chassis rail using items J with items N.
2. Loosely fix item A to items B1 and B2 using items K with items M.
3. Fully tighten all the fixings ensuring the Towbar is rigid, square, and secure.
4. If applicable remount item X to item A using items H and items L.
5. Remount the charcoal canister and rear bumper.
6. Loosely fix item D with item E and items F to item A on the correct setting (Figure 1) using items G and items M.
7. Fully tighten all remaining fixings.

Figure 1

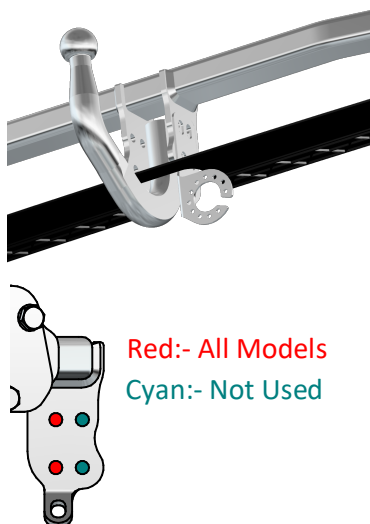

Red:- All Models
Cyan:- Not Used

Figure 2

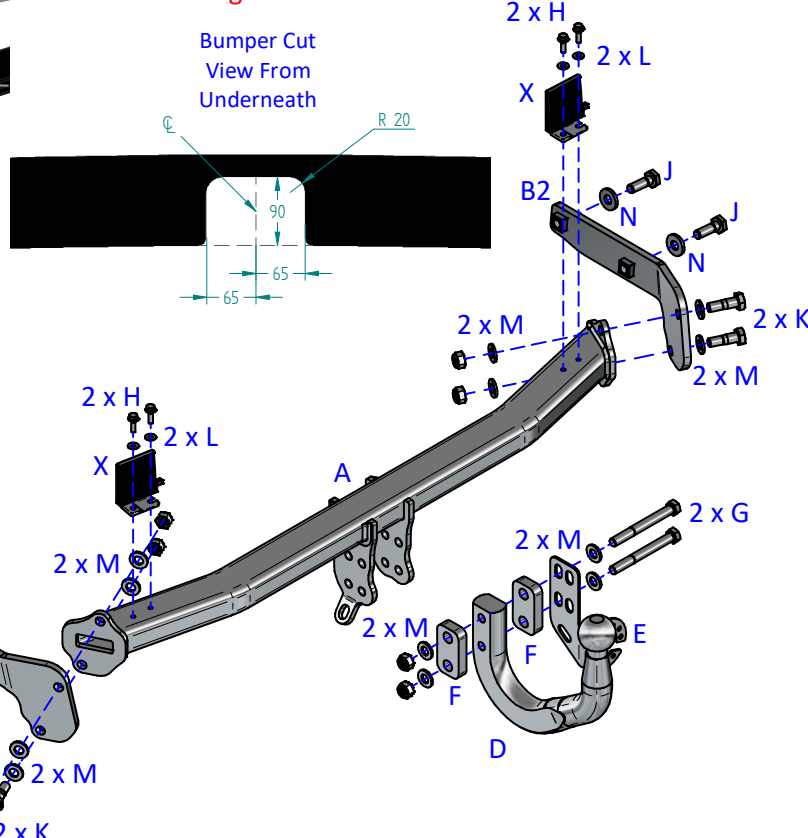

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.